

Using The 8251 Universal Synchronous/Asynchronous Receiver/ Transmitter

Lionel Smith
Microcomputer Applications

Using The 8251 Universal Synchronous/Asynchronous Receiver/Transmitter

Contents

INTRODUCTION	1
COMMUNICATION FORMATS	1
BLOCK DIAGRAM.	2
Receiver	2
Transmitter	3
Modem Control	4
I/O Control	4
INTERFACE SIGNALS	4
CPU-Related Signals	6
Device-Related Signals.	7
MODE SELECTION	7
PROCESSOR DATA LINK.	10
CONCLUSION	16
APPENDIX A _ 8251 DESIGN HINTS	28

Related Intel Publications

"Intel 8080 Microcomputer Systems User's Manual"

"Memory Design Handbook"

"8255 Programmable Peripheral Interface Applications"

INTRODUCTION

The Intel 8251 is a Universal Synchronous/Asynchronous Receiver/Transmitter (USART) which is capable of operating with a wide variety of serial communication formats. Since many peripheral devices are available with serial interfaces, the 8251 can be used to interface a microcomputer to a broad spectrum of peripherals, as well as to a serial communications channel. The 8251 is part of the MCS-80™ Microprocessor Family, and as such it is capable of interfacing to the 8080 system with a minimum of external hardware.

This application note describes the 8251 as a component and then explains its use in sample applications via several examples. A specific use of the 8251 to facilitate communication between two MCS-80 systems is discussed in detail from both the hardware and software viewpoints. The first two sections of this application note describe the 8251 first from a functional standpoint and then on a detailed level. The function of each input and output pin is fully defined. The next section describes the various operating modes and how they can be selected, and finally, a sample design is discussed using the 8251 as a data link between the MCS-80 systems.

COMMUNICATION FORMATS

Serial communications, either on a data link or with a local peripheral, occurs in one of two basic formats: asynchronous or synchronous. These formats are similar in that they both require framing information to be added to the data to enable proper detection of the character at the receiving end. The major difference between the two formats is that the asynchronous format requires framing information to be added to each character, while the synchronous format adds framing information to blocks of data, or messages. Since the synchronous format is more efficient than the asynchronous format but requires more complex decoding, it is typically found on high-speed data links, while the asynchronous format is used on lower speed lines.

The asynchronous format starts with the basic data bits to be transmitted and adds a "START" bit to the front of them and one or more "STOP" bits behind them as they are transmitted. The START bit is a logical zero, or SPACE, and is defined as the positive voltage level by RS-232-C. The STOP bit is a logical one, or MARK, and is defined as the negative voltage level by RS-232-C. In current loop applications current flow normally indicates a MARK and lack of current a SPACE. The START bit tells the receiver to start assembling a character and allows the receiver to synchronize itself with the transmitter. Since this synchronization only

has to last for the duration of the character (the next character will contain a new START bit), this method works quite well assuming a properly designed receiver. One or more STOP bits are added to the end of the character to ensure that the START bit of the next character will cause a transition on the communication line and to give the receiver time to "catch up" with the transmitter if its basic clock happens to be running slightly slower than that of the transmitter. If, on the other hand, the receiver clock happens to be running slightly faster than the transmitter clock, the receiver will perceive gaps between characters but will still correctly decode the data. Because of this tolerance to minor frequency deviations, it is not necessary that the transmitter and receiver clocks be locked to the identical frequency for successful asynchronous communication.

The synchronous format, instead of adding bits to each character, groups characters into records and adds framing characters to the record. The framing characters are generally known as SYN characters and are used by the receiver to determine where the character boundaries are in a string of bits. Since synchronization must be held over a fairly long stream of data, bit synchronization is normally either extracted from the communication channel by the modem or supplied from an external source.

An example of the synchronous and asynchronous formats is shown in Figure 1. The synchronous format shown is fairly typical in that it requires two SYN characters at the start of the message. The asynchronous format, also typical, requires a START bit preceding each character and a single STOP bit following it. In both cases, two 8-bit characters are to be transmitted. In the asynchronous mode $10 \times n$ bits are used to transmit n characters and in the synchronous mode $8N + 16$ bits are used. For the example shown the asynchronous mode is actually more efficient, using 20 bits versus 32. To transmit a thousand characters in the asynchronous mode, however, takes 10,000 bits versus 8,016 for the synchronous format mode. For long messages the synchronous format becomes much more efficient than the asynchronous format; the crossover point for the examples shown in Figure 1 is eight characters, for which both formats require 80 bits.

In addition to the differences in format between synchronous and asynchronous communication, there are differences with regards to the type of modems that can be used. Asynchronous modems typically employ FSK (Frequency Shift Keying) techniques which simply generate one audio tone for a MARK and another for a SPACE. The receiving modem detects these tones on the telephone

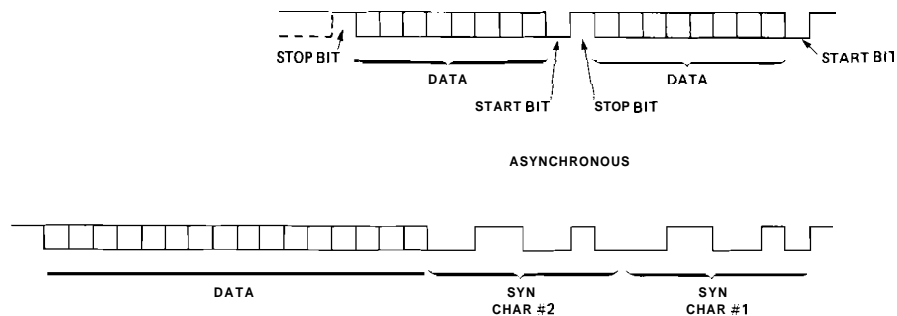


Figure 1. Transmission Formats

line, converts them to logical signals, and presents them to the receiving terminal. Since the modem itself is not concerned with the transmission speed, it can handle baud rates from zero to its maximum speed. Synchronous modems, in contrast to asynchronous modems, supply timing information to the terminal and require data to be presented to them in synchronism with this timing information. Synchronous modems, because of this extra clocking, are only capable of operating at certain preset baud rates. The receiving modem, which has an oscillator running at the same frequency as the transmitting modem, phase locks its clock to that of the transmitter and interprets changes of phase as data.

In some cases it is desirable to operate in a hybrid mode which involves transmitting data with the asynchronous format using a synchronous modem. This occurs when an increase in operating speed is required without a change in the basic protocol of the system. This hybrid technique is known as isosynchronous and involves the generation of the start and stop bits associated with the asynchronous format, while still using the modem clock for bit synchronization.

The 8251 USART has been designed to meet a broad spectrum of requirements in the synchronous, asynchronous, and isosynchronous modes. In the synchronous mode the 8251 operates with 5, 6, 7, or 8-bit characters. Even or odd parity can be optionally appended and checked. Synchronization can be achieved either externally via added hardware or internally via SYN character detection. SYN detection can be based on one or two characters which may or may not be the same. The single or double SYN characters are inserted into the data stream automatically if the software fails to supply data in time. The automatic generation of SYN characters is required to prevent the loss of synchronization. In the asynchronous mode the 8251 operates with the same data and parity structures as it does in the synchronous mode. In addition to appending a START bit to this data, the

8251 appends 1, 1½, or 2 STOP bits. Proper framing is checked by the receiver and a status flag set if an error occurs. In the asynchronous mode the USART can be programmed to accept clock rates of 16 or 64 times the required baud rate. Isosynchronous operation is a special case of asynchronous with the multiplier rate programmed as one instead of 16 or 64. Note that X1 operation is only valid if the clocks of the receiver and transmitter are synchronized.

The 8251 USART can transmit the three formats in half or full duplex mode and is double-buffered internally (i.e., the software has a complete character time to respond to a service request). Although the 8251 supports basic data set control signals (e.g., DTR and RTS), it does not fully support the signaling described in EIA-RS-232-C. Examples of unsupported signals are Carrier Detect (CF), Ring Indicator (CE), and the secondary channel signals. In some cases an additional port will be required to implement these signals. The 8251 also does not interface to the voltage levels required by EIA-RS-232-C: drivers and receivers must be added to accomplish this interface.

BLOCK DIAGRAM

A block diagram of the 8251 is shown in Figure 2. As can be seen in the figure, the 8251 consists of five major sections which communicate with each other on an internal data bus. The five sections are the receiver, transmitter, modem control, read/write control, and I/O Buffer. In order to facilitate discussion, the I/O Buffer has been shown broken down into its three major subsections: the status buffer, the transmit data/command buffer, and the receive data buffer.

Receiver

The receiver accepts serial data on the RxD pin and converts it to parallel data according to the appropriate format. When the 8251 is in the asynchronous mode and it is ready to accept a character

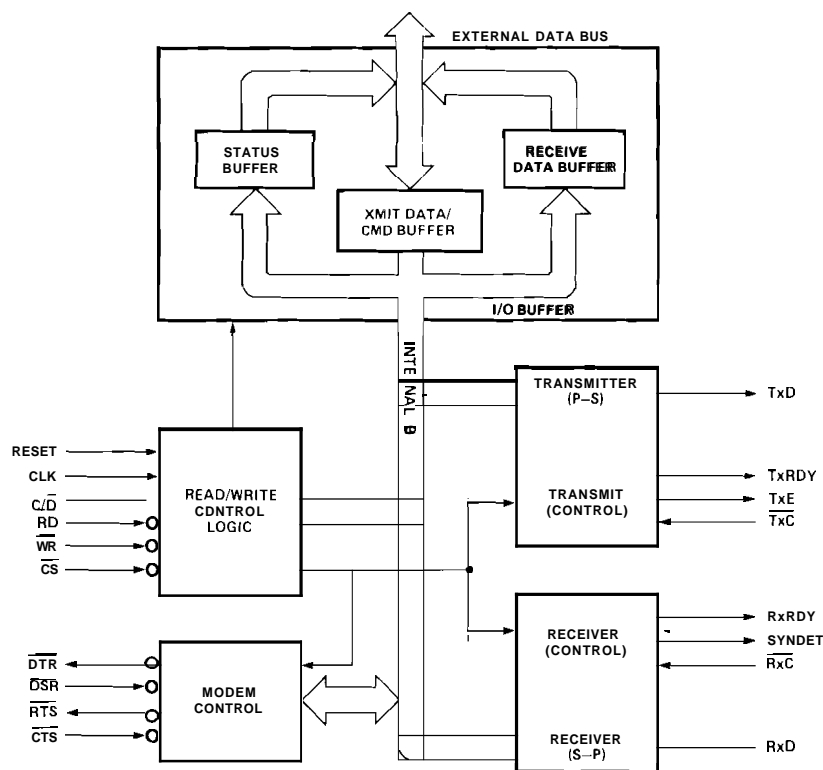


Figure 2. 8251 Block Diagram

(i.e., it is not in the process of receiving a character), it looks for a low level on the RxD line. When it sees the low level, it assumes that it is a START bit and enables an internal counter. At a count equivalent to one-half of a bit time, the RxD line is sampled again. If the line is still low, a valid START bit has probably been received and the 8251 proceeds to assemble the character. If the RxD line is high when it is sampled, then either a noise pulse has occurred on the line or the receiver has become enabled in the middle of the transmission of a character. In either case the receiver aborts its operation and prepares itself to accept a new character. After the successful reception of a START bit the 8251 clocks in the data, parity, and STOP bits, and then transfers the data on the internal data bus to the receive data register. When operating with less than 8 bits, the characters are right-justified. The RxRDY signal is asserted to indicate that a character is available.

In the synchronous mode the receiver simply clocks in the specified number of data bits and transfers them to the receiver buffer register, setting RxRDY. Since the receiver blindly groups data bits into characters, there must be a means of synchronizing the receiver to the transmitter so that the proper character boundaries are maintained in the serial data stream. This synchronization is achieved in the HUNT mode.

In the HUNT mode the 8251 shifts in data on the

RxD line one bit at a time. After each bit is received, the receiver register is compared to a register holding the SYN character (program loaded). If the two registers are not equal, the 8251 shifts in another bit and repeats the comparison. When the registers compare as equal, the 8251 ends the HUNT mode and raises the SYNDET line to indicate that it has achieved synchronization. If the USART has been programmed to operate with two SYN characters the process is as described above, except that two contiguous characters from the line must compare to the two stored SYN characters before synchronization is declared. Parity is not checked. If the USART has been programmed to accept external synchronization, the SYNDET pin is used as an input to synchronize the receiver. The timing necessary to do this is discussed in the SIGNALS section of this note. The USART enters the HUNT mode when it is initialized into the synchronous mode or when it is commanded to do so by the command instruction. Before the receiver is operated, it must be enabled by the Rx E bit (D_2) of the command instructions. If this bit is not set the receiver will not assert the RxRDY bit.

Transmitter

The transmitter accepts parallel data from the processor, adds the appropriate framing information, serializes it, and transmits it on the Tx D pin. In the asynchronous mode the transmitter always

adds a START bit; depending on how the unit is programmed, it also adds an optional even or odd parity bit, and either 1, 1½, or 2 STOP bits. In the synchronous mode no extra bits (other than parity, if enable) are generated by the transmitter unless the computer fails to send a character to the USART. If the USART is ready to transmit a character and a new character has not been supplied by the computer, the USART will transmit a SYN character. This is necessary since synchronous communications, unlike asynchronous communications, does not allow gaps between characters. If the USART is operating in the dual SYN mode, both SYN characters will be transmitted before the message can be resumed. The USART will not generate SYN characters until the software has supplied at least one character; i.e., the USART will fill 'holes' in the transmission but will not initiate transmission itself. The SYN characters which are to be transmitted by the USART are specified by the software during the initialization procedure. In either the synchronous or asynchronous modes, transmission is inhibited until TxEnable and the CTS input are asserted.

An additional feature of the transmitter is the ability to transmit a BREAK. A BREAK is a period of continuous SPACE on the communication line and is used in full duplex communication to interrupt the transmitting terminal. The 8351 USART will transmit a BREAK condition as long as bit 3 (SBRK) of the command register is set.

Modem Control

The modem control section provides for the generation of RTS and the reception of CTS. In addition, a general purpose output and a general purpose input are provided. The output is labeled DTR and the input is labeled DSR. DTR can be asserted by setting bit 2 of the command instruction; DSR can be sensed as bit 7 of the status register. Although the USART itself attaches no special significance to these signals, DTR (Data Terminal Ready) is normally assigned to the modem, indicating that the terminal is ready to communicate and DSR (Data Set Ready) is a signal from the modem indicating that it is ready for communications.

I/O Control

The Read/Write Control Logic decodes control signals on the 8080 control bus into signals which gate data on and off the USART's internal bus and controls the external I/O bus (DB₀–DB₇). The truth table for these operations is as follows:

If neither $\overline{\text{READ}}$ or $\overline{\text{WRITE}}$ is a zero, then the USART will not perform an I/O function. $\overline{\text{READ}}$


CE	C/D	$\overline{\text{READ}}$	$\overline{\text{WRITE}}$	Function
0	0	0	1	CPU Reads Data from USART
0	1	0	1	CPU Reads Status from USART
0	0	1	0	CPU Writes Data to USART
0	1	1	0	CPU Writes Command to USART
1	X	X	X	USART Bus Floating (NO-OP)

and $\overline{\text{WRITE}}$ being a zero at the same time is an illegal state with undefined results. The Read/Write Control Logic contains synchronization circuits so that the $\overline{\text{READ}}$ and $\overline{\text{WRITE}}$ pulses can occur at any time with respect to the clock inputs to the USART.

The I/O buffer contains the STATUS buffer, the RECEIVE DATA buffer and the XMIT DATA/CMD buffer as shown in Figure 2. Note that although there are two registers which store data for transfer to the CPU (STATUS and RECEIVE DATA), there is only one register which stores data being transferred to the USART. The sharing of the input register for both transmit data and commands makes it important to ensure that the USART does not have data stored in this register before sending a command to the device. The TxRDY signal can be monitored to accomplish this. Neither data nor commands should be transferred to the USART if TxRDY is low. Failure to perform this check can result in erroneous data being transmitted.

INTERFACE SIGNALS

The interface signals of the 8251 USART can be broken down into two groups — a CPU-related group and a device-related group. The CPU-related signals have been designed to optimize the attachment of the 8351 to a MCS-80™ system. The device-related signals are intended to interface a modem or like device. Since many peripherals (TTY, CRT, etc.) can be obtained with a modem-like interface, the USART has a broad range of applications which do not include a modem. Note that although the USART provides a logical interface to an EIA-RS-232 device, it does not provide EIA compatible drive, and this must be added via circuitry external to the 8251. As an example of a peripheral interface application and to aid in understanding the signal descriptions which follow, Figure 3 shows a system configured to interface with a TTY or CRT.

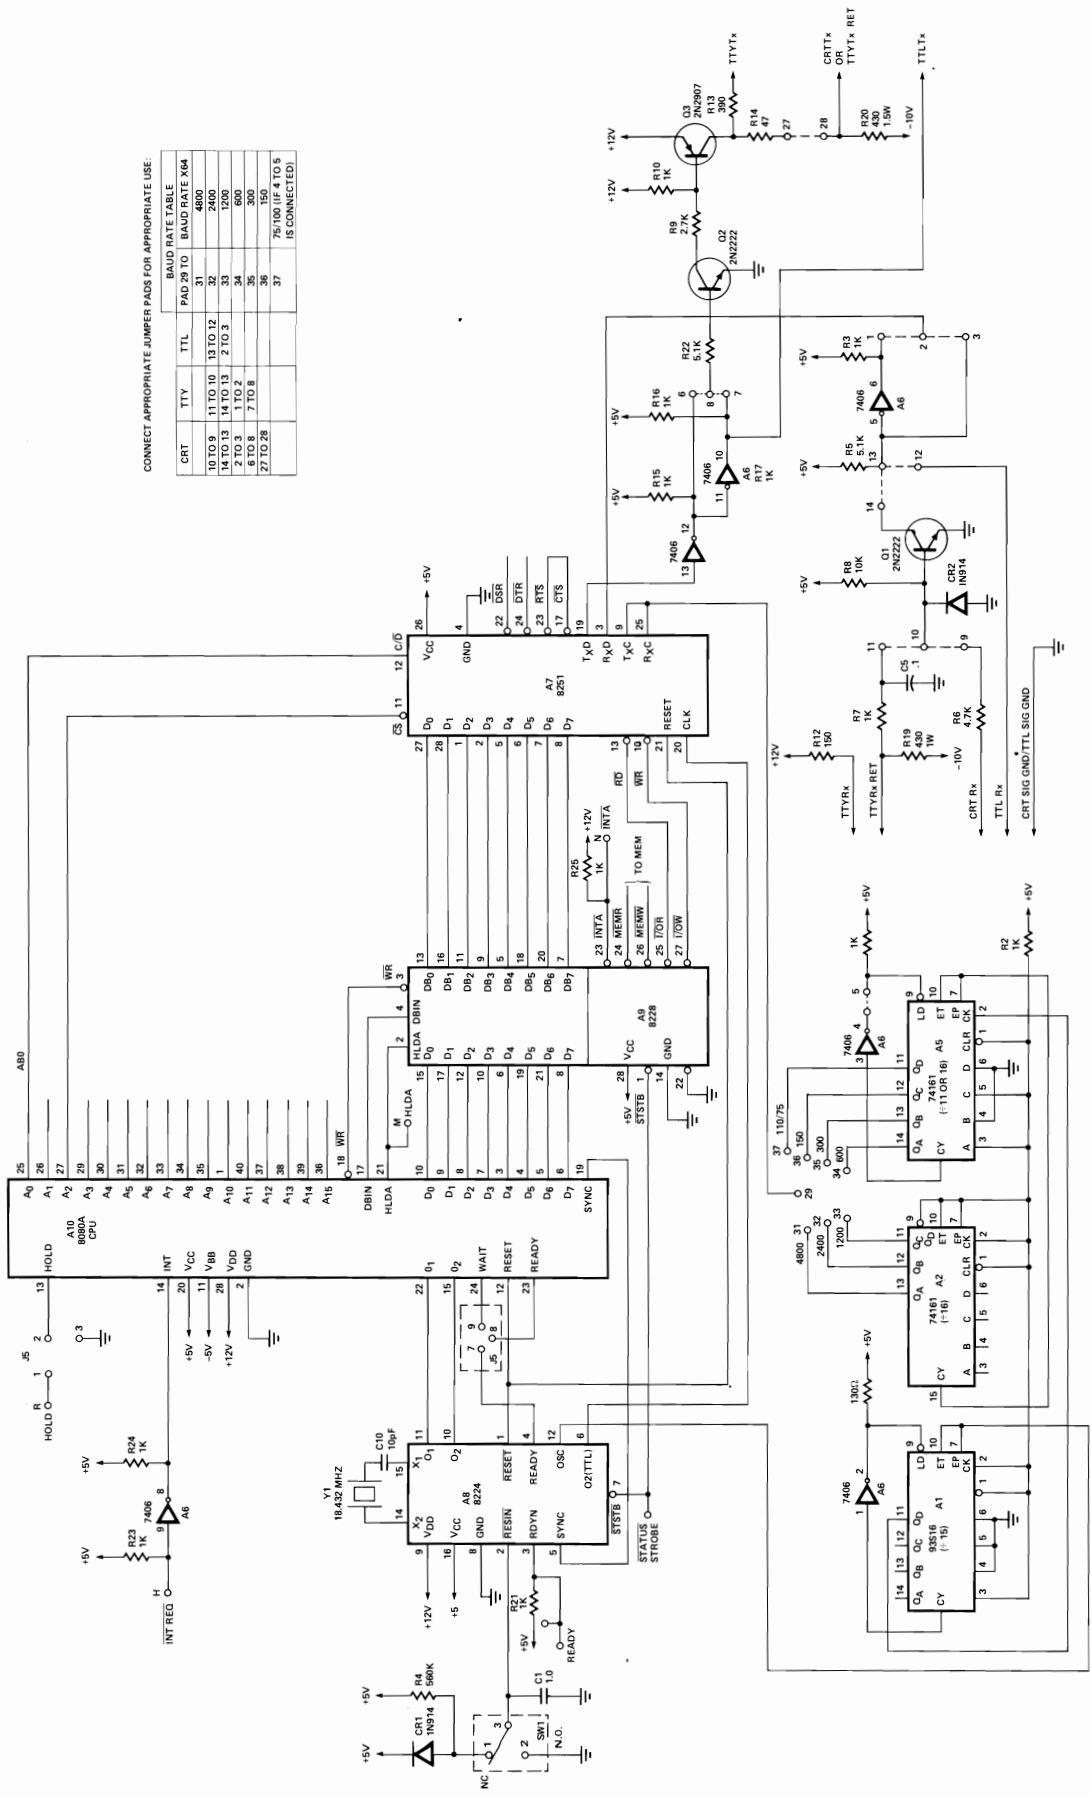

CONNECT APPROPRIATE JUMPER PADS FOR APPROPRIATE USE:

CRT	TTY	TTL	PAD 29 TO	BAUD RATE X16
10 TO 9	11 TO 10	13 TO 12	31	4800
14 TO 13	14 TO 13	2 TO 3	33	1200
2 TO 3	1 TO 2		34	600
6 TO 5	7 TO 6		35	300
27 TO 26			36	150
			37	75 (NO JUMPER TO 5 IS CONNECTED)

Figure 3. Terminal Interface

CPU-Related Signals

V _{CC} (26)	I	+5 Volt Supply			
GND (4)	I	+5 Volt Common			
CLK (20)	I	The CLK input generates internal device timing. No external inputs or outputs are referenced to CLK, but the frequency of CLK must be greater than 30 times the Receiver or Transmitter clock inputs for synchronous mode or 4.5 times the clock inputs for an asynchronous mode. An additional constraint is imposed by the electrical specifications (ref. Appendix B) which require the period of CLK be between 0.42 μ sec and 1.35 μ sec. The CLK input can generally be connected to the Phase 2 (TTL) output of the 8224 clock generator.			
RESET (21)	I	A high on this input performs a master reset on the 8251. The device returns to the idle mode and will remain there until reinitialized with the appropriate control words.			
DB ₇ –DB ₀ (8,7,6,5,2,1, 28,27)	I/O	The DB signals form a three-state bus which can be connected to the CPU data bus. Control, status, and data are transferred on this bus. Note that the CPU always remains in control of the bus and all transfers are initiated by it.			
$\overline{\text{CS}}$ (11)	I	<i>Chip Select.</i> A low on this input enables communication between the USART and the CPU. Chip Select should go low when the USART is being addressed by the CPU.			
C/ $\overline{\text{D}}$ (12)	I	<i>Control/Data.</i> During a read operation this pin selects either status or data to be input to the CPU (high=status, low=data). During a write operation this pin causes the USART to interpret the data on the bus as a command if it is high or as data if it is low.			
$\overline{\text{RD}}$ (13)	I	A low on this input causes the USART to gate either			status or data onto the data bus.
			$\overline{\text{WR}}$ (10)	I	A low on this input causes the USART to accept data on the data bus as either a command or as a data character.
			TxRDY (15)	O	<i>Transmitter Ready.</i> This output signals the CPU that the USART is ready to accept a data character or command. It can be used as an interrupt to the system or, for polled operation, the CPU can check TxRDY using the status read operation. Note, however, that while the TxRDY status bit will be asserted whenever the XMIT DATA/CMD buffer is empty, the TxRDY output will be asserted only if the buffer is empty and the USART is enabled to transmit (i.e., $\overline{\text{CTS}}$ is low and TxEN is high). TxRDY will be reset when the USART receives a character from the program.
			TxE (18)	O	<i>Transmitter Empty.</i> A high output on this line indicates that the parallel to serial converter in the transmitter is empty. In the synchronous mode, if the CPU has failed to load a new character in time, TxE will go high momentarily as SYN characters are loaded into the transmitter to fill the gap in transmission.
			RxRDY (14)	O	<i>Transmitter Ready.</i> This output goes high to indicate that the 8251 has received a character on its serial input and is ready to transfer it to the CPU. Although the receiver runs continuously, RxRDY will only be asserted if the RxE (Receive Enable) bit in the command register has been set. RxRDY can be connected to the interrupt structure or, for polled operation, the CPU can check the condition of RxRDY using a status read operation. RxRDY will be reset when the character is read by the CPU.

SYNDET (16) I/O *Synch Detect* This line is used in the synchronous mode only. It can be either an input or output, depending on whether the initialization program sets the USART for external or internal synchronization. SYNDET is reset to a zero by RESET. When in the internal synchronization mode, the USART uses SYNDET as an output to indicate that the device has detected the required SYN character(s). A high output indicates synchronization has been achieved. If the USART is programmed to operate with double SYN characters, SYNDET will go high in the middle of the last bit of the second SYN character. SYNDET will be reset by a status read operation. When in the external synchronization mode a positive-going input on the SYNDET line will cause the 8251 to start assembling characters on the next falling edge of \overline{RxC} . The high input should be maintained at least for one RxC cycle following this edge.

Device-Related Signals

\overline{DTR} (24) O *Data Terminal Ready*. This is a general purpose output signal which can be set low by programming a '1' in command instruction bit 1. This signal allows additional device control.

\overline{DSR} (22) I *Data Set Ready*. This is a general purpose input signal. The status of this signal can be tested by the CPU through a status read. This pin can be used to test device status and is read as bit 7 of the status register.

\overline{RTS} (23) O *Request to Send*. This is a general purpose output signal equivalent to \overline{DTR} . RTS is normally used to request that the modem prepare itself to transmit (i.e., establish carrier). RTS can be asserted

(brought low) by setting bit 5 in the command instruction.

\overline{CTS} (17) I *Clear to Send*. A low on this input enables the USART to transmit data. CTS is normally generated by the modem in response to a RTS.

\overline{RxC} (25) I *Receiver Clock*. This clock controls the data rate of characters to be received by the USART. In the synchronous mode RxC is equivalent to the baud rate, and is supplied by the modem. In asynchronous mode \overline{RxC} is 1, 16, or 64 times the baud rate. The clock division is preselected by the mode control instruction. Data is sampled by the USART on the rising edge of RxC.

RxD (3) I *Receiver Data*. Characters are received serially on this pin and assembled into parallel characters. RxD is high true (i.e., High = MARK or ONE).

\overline{TxC} (9) I *Transmitter Clock*. This clock controls the rate at which characters are transmitted by the USART. The relationship between clock rate and baud rate is the same as for RxC. Data is shifted out of the USART on the falling edge of TxC.

TxD (19) O *Transmit Data*. Parallel characters sent by the CPU are transmitted serially by the USART on this line. TxD is high true (i.e., High = MARK or ONE).

MODE SELECTION

The 8251 USART is capable of operating in a number of modes (e.g., synchronous or asynchronous). In order to keep the hardware as flexible as possible (both at the chip and end product level), these operating modes are selected via a series of control outputs to the USART. These mode control outputs must occur between the time the USART is reset and the time it is utilized for data transfer. Since the USART needs this information to structure its internal logic it is essential to complete the initialization before any attempts are made at data transfer (including reading status).

A flowchart of the initialization process appears in Figure 4. The first operation which must occur following a reset is the loading of the mode control

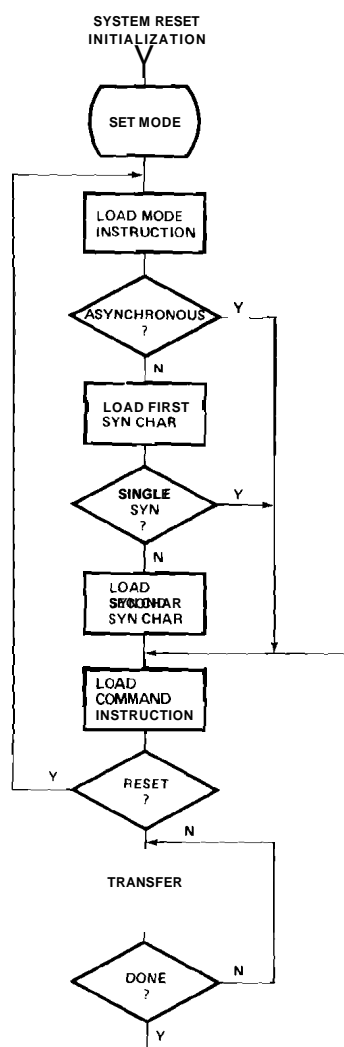


Figure 4. Initialization Flowchart

register. The mode control register is loaded by the first control output ($C/\overline{D}=1$, $RD=1$, $\overline{WR}=0$, $\overline{CS}=0$) following a reset. The format of the mode control instruction is shown in Figure 5. The instruction can be considered as four 2-bit fields. The first 2-bit field ($D_1 D_0$) determines whether the USART is to operate in the synchronous (00) or asynchronous mode. In the asynchronous mode this field also controls the clock scaling factor. As an example, if D_1 and D_0 are both ones, the RxC and TxC will be divided by 64 to establish the baud rate. The second field, D_3-D_2 , determines the number of data bits in the character and the third, D_5-D_4 , controls parity generation. Note that the parity bit (if enabled) is added to the data bits and is not considered as part of them when setting up the character length. As an example, standard ASCII transmission, which is seven data bits plus even parity, would be specified as:

X X 1 1 1 0 X X

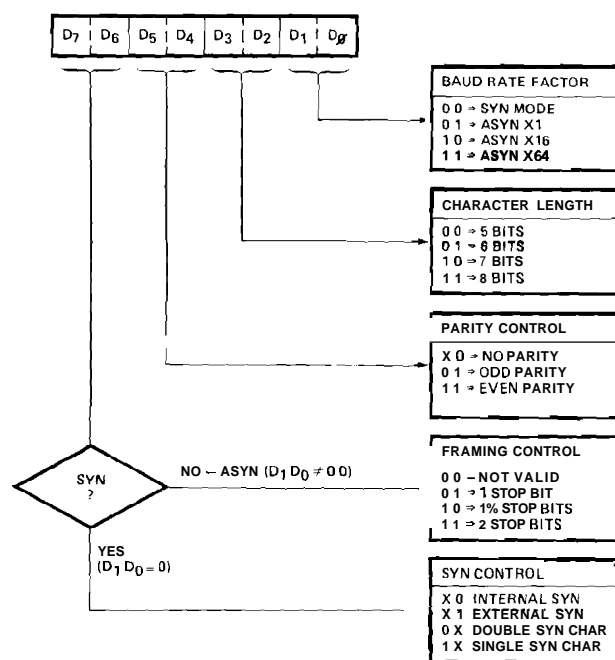


Figure 5. Mode Instruction Format

The last field, D_7-D_6 , has two meanings, depending on whether operation is to be in the synchronous or asynchronous mode. For the asynchronous mode (i.e., $D_1 D_0 \neq 00$), it controls the number of STOP bits to be transmitted with the character. Since the receiver will always operate with only one STOP bit, D_7 and D_6 only control the transmitter. In the synchronous mode ($D_1 D_0 = 00$), this field controls the synchronizing process. Note that the choice of single or double SYN characters is independent of the choice of internal or external synchronization. This is because even though the receiver may operate with external synchronization logic, the transmitter must still know whether to send one or two SYN characters should the CPU fail to supply a character in time.

Following the loading of the mode instruction the appropriate SYN character (or characters) must be loaded if synchronous mode has been specified. The SYN character(s) are loaded by the same control output instruction used to load the mode instruction. The USART determines from the mode instruction whether no, one, or two SYN characters are required and uses the control output to load SYN characters until the required number are loaded.

At completion of the load of SYN characters (or after the mode instruction in the asynchronous mode), a command character is issued to the USART. The command instruction controls the operation of the USART within the basic framework established by the mode instruction. The format of the command instruction is shown in

Figure 6. Note that if, as an example, the USART is waiting for a SYN character load and instead is issued an internal reset command, it will accept the command as a SYN character instead of resetting. This situation, which should only occur if two independent programs control the USART, can be avoided by outputting three all zero characters as commands before issuing the internal reset command. The USART indicates its state in a status register which can be read under program control. The format of the status register read is shown in Figure 7.

When operating the receiver it is important to realize that RxEN (bit 2 of the command instruction) only inhibits the assertion of RxRDY; it does not inhibit the actual reception of characters. Because the receiver is constantly running, it is possible for it to contain extraneous data when it is enabled. To avoid problems this data should be read from the USART and discarded. The read should be done immediately following the setting of Receive Enable in the asynchronous mode, and following the setting of Enter Hunt in the synchronous mode. It is not necessary to wait for RxRDY before executing the dummy read.

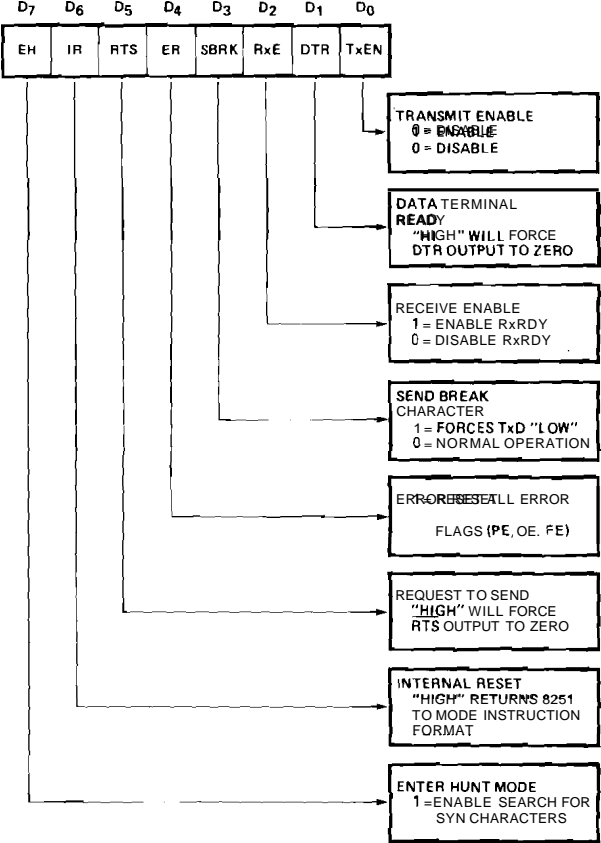


Figure 6. Command Instruction Format

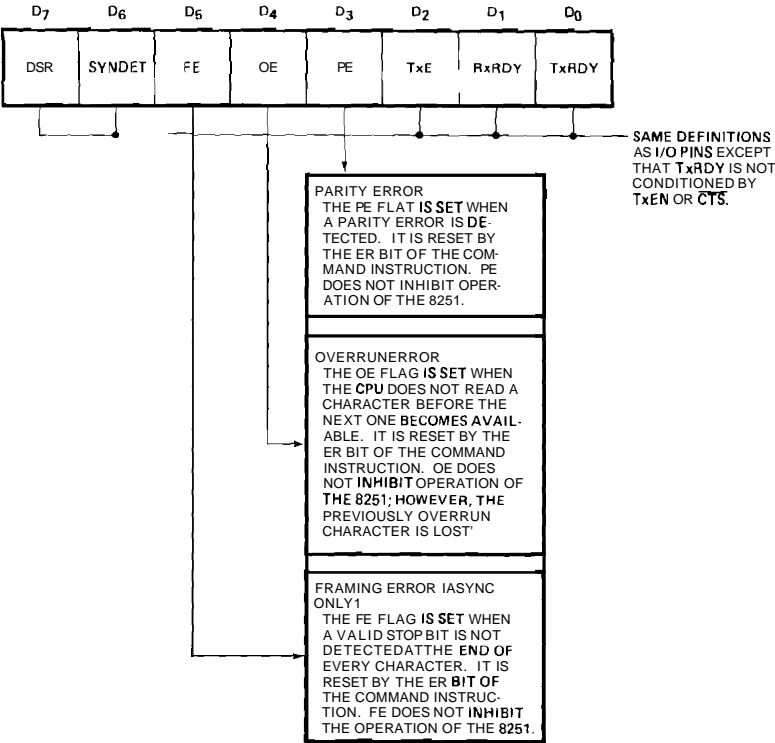


Figure 7. Status Register Format

PROCESSOR DATA LINK

The ability to change the operating mode of the USART by software makes the 8251 an ideal device to use to implement a serial communication link. A terminal initially configured with a simple asynchronous protocol can be upgraded to a synchronous protocol such as IBM Binary Synchronous Communication by a software only upgrade. In order to demonstrate the use of the 8251 USART, the remainder of this document will describe the implementation of an interrupt-driven, full duplex communication link on the Intel MDS™ system. With minor modifications, the program developed could be used on the Intel SBC-80/10™ OEM card, thus implementing a data link between the two systems. Such a facility can be used to down-load programs, run diagnostics, and maintain common data bases in multiprocessor systems.

The factors which must be considered in the design of such a link include the desired transmission rate and format, the error checking requirements, the desirability of full duplex operation, and the physical implementation of the link. The basic requirement of the system described here is that it allow an Intel SBC-80/10 OEM card to be loaded from an MDS development system, either locally or on the switched telephone network. An additional constraint is that the modem used on the switched network be readily available and inexpensive. These requirements led to the choice of a modem such as the Bell 103A to implement the link. These modems, which support full duplex communication at up to 300 baud, are readily available from a number of sources at reasonable cost. These modems are also available in acoustically coupled versions which do not require permanent installation on the telephone network. Interface to the 103A modem is accomplished with nine wires: Protective Ground, Signal Ground, Transmitted Data, Received Data, Clear to Send, Data Set Ready, Data Terminal Ready, Carrier Detector, and Ringing Indicator.

The utilization of the interface signals to the modem is as follows:

Protective Ground	Protective Ground is used to bond the chassis ground of the modem to that of the terminal.
Signal Ground	Signal Ground provides a common ground reference between the modem and the terminal.
Transmitted Data	Transmitted Data is used to transfer serial data from the terminal to the modem.

Received Data	Received Data is used to transfer serial data from the modem to the terminal.
Clear to Send	Clear to Send indicates that the modem has established a connection with a remote modem and is ready to transmit data.
Data Set Ready	Data Set Ready indicates that the modem is connected to the telephone line and is in the data mode.
Data Terminal Ready	Data Terminal Ready is a signal from the terminal which permits the modem to enter the data mode.
Carrier Detector	Carrier Detector is identical to Clear to Send in the 103 modem and will not be used in this interface.
Ringing Indicator	Ringing Indicator indicates that the modem is receiving a ringing signal from the telephone system. This signal will not be used in the interface, since it is possible for the terminal to assert Data Terminal Ready whenever it is ready for the modem to "answer the telephone". The modem uses Data Set Ready to indicate that it has answered the call.

A block diagram showing the connections between the MDS and the SBC-80/10 through the modems is shown in Figure 8. Figure 9 shows the portion of the MDS monitor board devoted to the USARTs and Figure 10 shows the equivalent section of the SBC-80/10 board. Note that several signals on the MDS do not have the proper EIA defined voltage levels, and for this reason the adapter shown in Figure 11 was added to the MDS. The 390 pF capacitor was added to the 1488 driver to bring the rise time within EIA imposed limits of 30 volts/ μ sec. In Figure 7 the signal labels within the MDS and SBC-80/10 blocks correspond to the labels on the schematics, the signal labels within the modem blocks correspond to EIA conventions, and the signal labels on the wires between the blocks are abbreviations for the English language names of the signals.

As an example of how the USART clocks can be generated, circuits A27, A16, and A15 of Figure 9 form a divider of the OSC signal. The OSC signal has a frequency of 18.432 MHz and is generated by the 8224 which generates system timing for the 8080A. The 18.432 MHz signal results in a state time of 488 ns versus the normal 500 ns for the 8080A. (This does not violate 8080A specifications.) The 18.432 MHz signal can be divided by

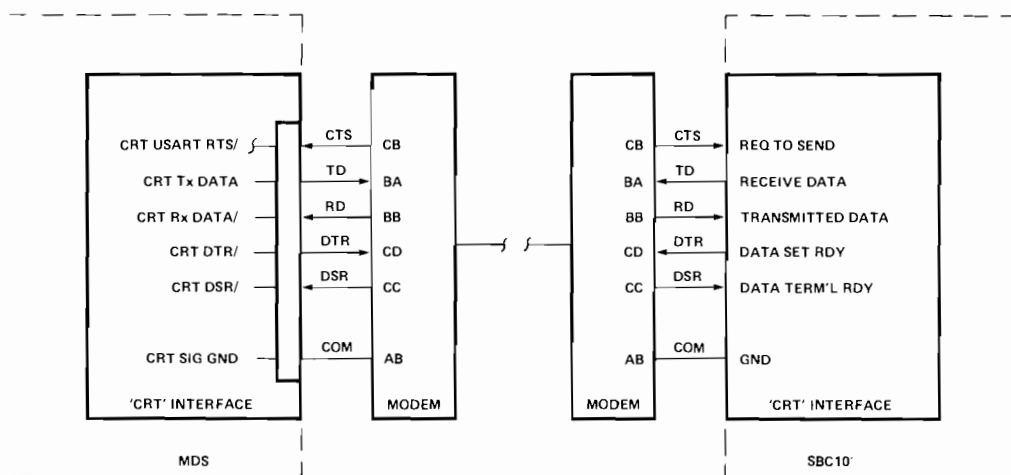


Figure 8. System Block Diagram

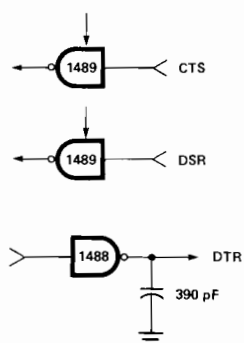


Figure 9. EIA Adapter

30 and then 64 to give a 9600 baud communication standard. The 9600 baud signal can be further divided to give 4800, 2400, 1200, 600, and 300 baud signals. The 1200 baud signal can be divided by 11 to give a 109.1 baud signal which is within 1% of the 110 baud standard signal rate. Note that because of constraints on the CLK input 9600 baud operation is not possible in the X64 mode. The divide by 64 can be accomplished by dividing by 4 with a counter and then 16 within the USART.

In order to keep the system as general purpose as possible, it was decided to transmit 8-bit data characters with an appended odd parity bit. Having a full 8-bit byte available for data enables the transmission of codes such as ASCII (which is 7-level with an additional parity bit) to be transmitted and received transparently in the system. Also, of course, it allows 8-bit bytes from the 8080A memory to be transferred in one transmission character. If error checking beyond the parity check is required, it could be added to the data record to be transmitted in the form of redundant check characters.

Before the software design of the system could be undertaken, it was necessary to decide whether service requests from the USART would be handled on a polled or interrupt driven mode. Polled operation normally results in more compact code but it requires that whatever programs are running concurrently with a transmission or reception must periodically either check the status of the USART or call a routine that does. Since it was not possible to determine what program might be running during a receive or transmit operation, it was decided to operate in an interrupt driven mode.

The program which operates the 8251 must be instructed as to what data it should transmit or receive from some other program resident in the 8080 system. To facilitate the discussion of the operation of the software, the following definitions will be made:

USRUN is the program which controls the operation of the 8251.

USER is a program which utilizes USRUN in order to effect a data transmission.

USER passes commands and parameters to USRUN by means of the control block shown in Figure 12. The first byte of the block contains the command which USER wants USRUN to execute. Valid contents of this byte are "C" which causes USRUN to initialize itself and the 8251, "R" which causes the execution of the data input (or READ) operation, and "W" which causes a data output (WRITE) operation. The second byte of the control block is used by USRUN to inform USER of the status of the requested operation. The third and fourth bytes specify the starting address of a buffer set up by USER which contains the data for a transmit operation or which will be used by USRUN to store received data. The fifth and sixth bytes are concatenated to form a positive binary



Figure 11. MDS Monitor Module

number which specifies how many bytes of data USER wants transferred. The seventh and eighth bytes are concatenated and used by USRUN to count the number of bytes that have been transferred. When the required number of characters have been transferred, or if USRUN terminates a READ or WRITE due to an abnormal condition, then USRUN calls a subroutine at an address defined by the ninth and tenth bytes of the command block. This subroutine, which is provided by USER, must determine the state of the process and then take appropriate action.

Since USRUN must be capable of operation in a full duplex mode (i.e., be able to receive and transmit simultaneously), it keeps the address of two control blocks; one for a READ operation and one for a WRITE. The address of the controlling command block is kept in RAM locations labeled RCBA for the READ operation and TCBA for the WRITE operation. If RCBA (Receive Control Block Address) or TCBA (Transmit Control Block Address) is zero, it indicates that the corresponding operation is in an idle status.

Flowcharts of USRUN appear in Figure 13 and the listings appear in Figure 14. The first section of the flowcharts (Figures 13.1 and 13.2) consists of two subroutines which are used as convenient tools for operating on the control blocks. These routines are labeled LOADA and CLEAN. LOADA is entered with the address of a control block in registers H and L. Upon return registers D and E have been set equal to the address in the buffer which is the target of the next data transfer (i.e., $D,E = \text{BAD} + \text{CCT}$); and CCT (transferred byte count) has then been incremented. In addition, the B register is set to zero if the number of bytes that have been transferred is equal to the number requested (i.e., $\text{CCT} = \text{RCT}$). CLEAN, the second routine, is also entered with the address of a command block in the H and L registers. In addition, the Accumulator holds the status which will be placed in the STATUS byte of the command block. On exit the STATUS byte has been updated and the address of the completion routine has been placed in H and L.

Upon interrupt, control of the MCS-80 system is transferred to VECTOR (Figure 13.3). Vector is a program which saves the state of the system, gets the status of the USART and jumps to the RISR (Receive Interrupt Service Routine) or the TISR (Transmit Interrupt Service Routine), depending on which of the two ready flags is active. If neither ready flag is active, VECTOR restores the status of the running program, enables interrupts, and returns. (Interrupts are automatically disabled by the hardware upon an interrupt.) This exit from VECTOR, which is labeled VOUT, is used from other

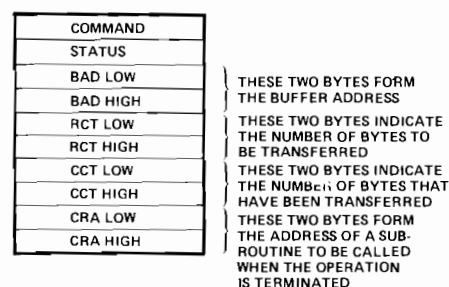


Figure 12. Control Block

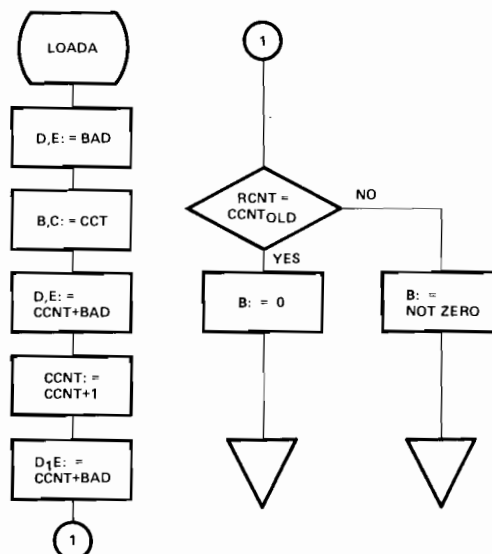


Figure 13.1. LOADA Subroutine

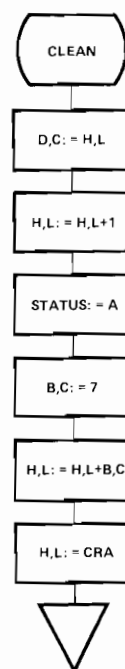


Figure 13.2. CLEAN Subroutine

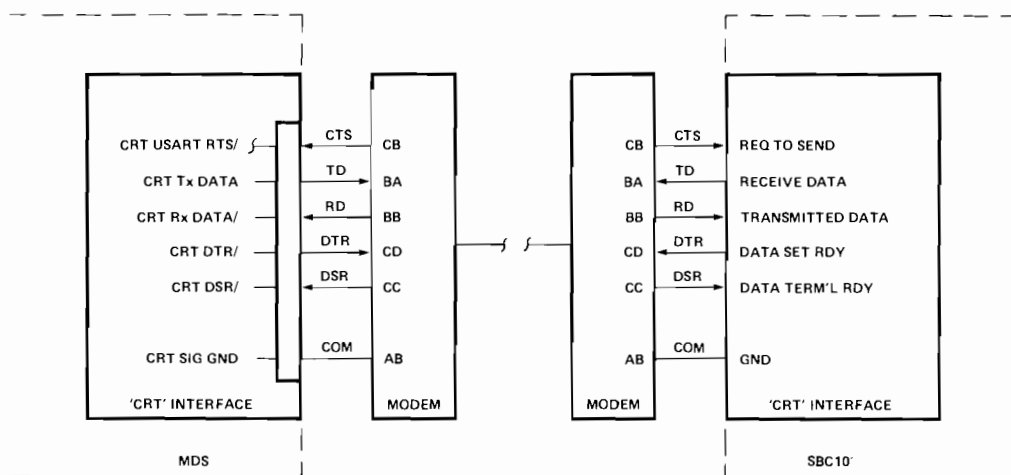


Figure 8. System Block Diagram

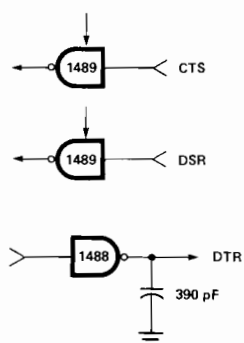


Figure 9. EIA Adapter

30 and then 64 to give a 9600 baud communication standard. The 9600 baud signal can be further divided to give 4800, 2400, 1200, 600, and 300 baud signals. The 1200 baud signal can be divided by 11 to give a 109.1 baud signal which is within 1% of the 110 baud standard signal rate. Note that because of constraints on the CLK input 9600 baud operation is not possible in the X64 mode. The divide by 64 can be accomplished by dividing by 4 with a counter and then 16 within the USART.

In order to keep the system as general purpose as possible, it was decided to transmit 8-bit data characters with an appended odd parity bit. Having a full 8-bit byte available for data enables the transmission of codes such as ASCII (which is 7-level with an additional parity bit) to be transmitted and received transparently in the system. Also, of course, it allows 8-bit bytes from the 8080A memory to be transferred in one transmission character. If error checking beyond the parity check is required, it could be added to the data record to be transmitted in the form of redundant check characters.

Before the software design of the system could be undertaken, it was necessary to decide whether service requests from the USART would be handled on a polled or interrupt driven mode. Polled operation normally results in more compact code but it requires that whatever programs are running concurrently with a transmission or reception must periodically either check the status of the USART or call a routine that does. Since it was not possible to determine what program might be running during a receive or transmit operation, it was decided to operate in an interrupt driven mode.

The program which operates the 8251 must be instructed as to what data it should transmit or receive from some other program resident in the 8080 system. To facilitate the discussion of the operation of the software, the following definitions will be made:

USRUN is the program which controls the operation of the 8251.

USER is a program which utilizes USRUN in order to effect a data transmission.

USER passes commands and parameters to USRUN by means of the control block shown in Figure 12. The first byte of the block contains the command which USER wants USRUN to execute. Valid contents of this byte are "C" which causes USRUN to initialize itself and the 8251, "R" which causes the execution of the data input (or READ) operation, and "W" which causes a data output (WRITE) operation. The second byte of the control block is used by USRUN to inform USER of the status of the requested operation. The third and fourth bytes specify the starting address of a buffer set up by USER which contains the data for a transmit operation or which will be used by USRUN to store received data. The fifth and sixth bytes are concatenated to form a positive binary



Figure 11. MDS Monitor Module

number which specifies how many bytes of data USER wants transferred. The seventh and eighth bytes are concatenated and used by USRUN to count the number of bytes that have been transferred. When the required number of characters have been transferred, or if USRUN terminates a READ or WRITE due to an abnormal condition, then USRUN calls a subroutine at an address defined by the ninth and tenth bytes of the command block. This subroutine, which is provided by USER, must determine the state of the process and then take appropriate action.

Since USRUN must be capable of operation in a full duplex mode (i.e., be able to receive and transmit simultaneously), it keeps the address of two control blocks; one for a READ operation and one for a WRITE. The address of the controlling command block is kept in RAM locations labeled RCBA for the READ operation and TCBA for the WRITE operation. If RCBA (Receive Control Block Address) or TCBA (Transmit Control Block Address) is zero, it indicates that the corresponding operation is in an idle status.

Flowcharts of USRUN appear in Figure 13 and the listings appear in Figure 14. The first section of the flowcharts (Figures 13.1 and 13.2) consists of two subroutines which are used as convenient tools for operating on the control blocks. These routines are labeled LOADA and CLEAN. LOADA is entered with the address of a control block in registers H and L. Upon return registers D and E have been set equal to the address in the buffer which is the target of the next data transfer (i.e., $D,E = \text{BAD} + \text{CCT}$); and CCT (transferred byte count) has then been incremented. In addition, the B register is set to zero if the number of bytes that have been transferred is equal to the number requested (i.e., $\text{CCT} = \text{RCT}$). CLEAN, the second routine, is also entered with the address of a command block in the H and L registers. In addition, the Accumulator holds the status which will be placed in the STATUS byte of the command block. On exit the STATUS byte has been updated and the address of the completion routine has been placed in H and L.

Upon interrupt, control of the MCS-80 system is transferred to VECTOR (Figure 13.3). Vector is a program which saves the state of the system, gets the status of the USART and jumps to the RISR (Receive Interrupt Service Routine) or the TISR (Transmit Interrupt Service Routine), depending on which of the two ready flags is active. If neither ready flag is active, VECTOR restores the status of the running program, enables interrupts, and returns. (Interrupts are automatically disabled by the hardware upon an interrupt.) This exit from VECTOR, which is labeled VOUT, is used from other

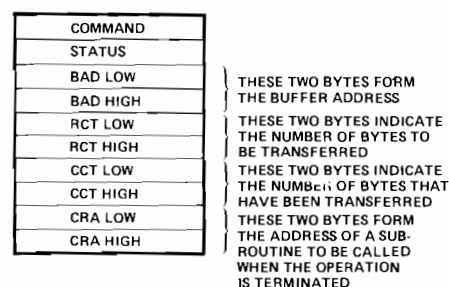


Figure 12. Control Block

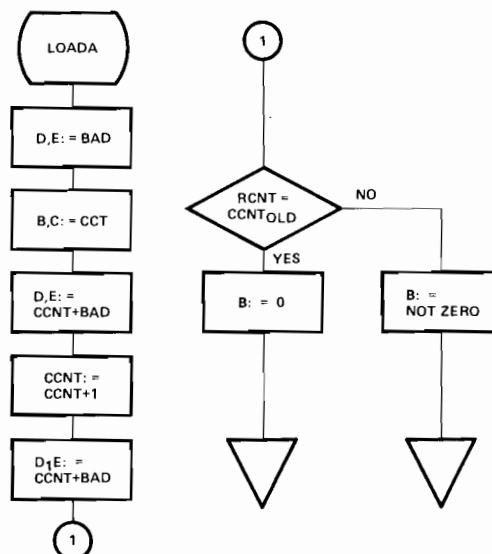


Figure 13.1. LOADA Subroutine

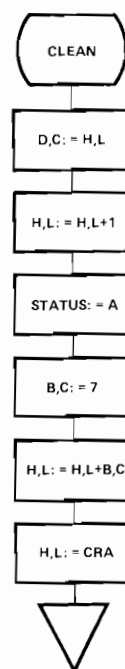


Figure 13.2. CLEAN Subroutine

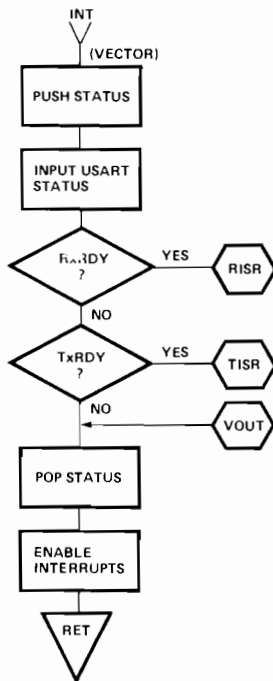


Figure 13.3. Interrupt Entry

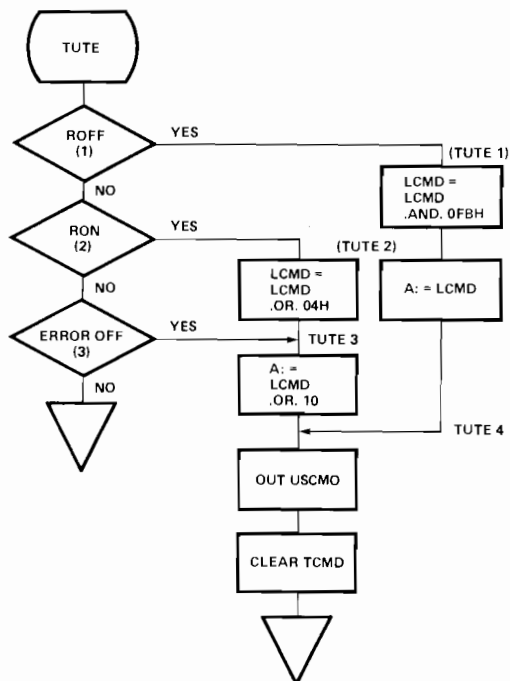


Figure 13.4. Transmit Interrupt Service Routine

portions of USRUN if return from the interrupt mode is required.

In addition to handling normal data transfers, TISR (Figure 13.4) checks a location in memory named TCMD in order to determine if the receive program wishes to send a command to the USART. Since the transmit data and command must share a buffer within the USART, any command output must occur when TxRDY is asserted. If TCMD is zero, TISR proceeds with the data transfer. If TCMD is non-zero, TISR calls TUTE (Transmit Utility, Figure 13.5) which, depending on the value

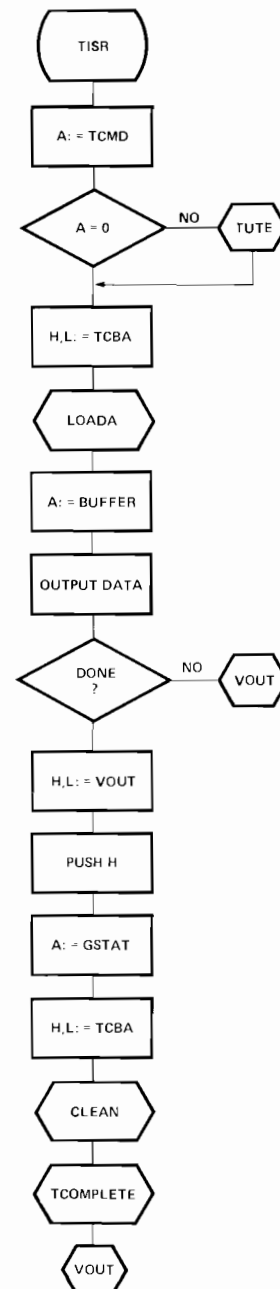


Figure 13.5. Transmit Utility Routine

in TCMD, turns off the receiver, turns on the receiver, or clears error conditions. Note that the error flags (parity, framing, and overrun) are always cleared by the software when the receiver is first enabled.

The flowchart of the RISR is shown in Figure 13.6. Note that in addition to terminating whenever the required number of characters have been received, the RISR also terminates if one of the error flags becomes set or if the received character matches a character found in a table pointed to by the label ETAB. This table, which starts at ETAB and continues until an all "ones" entry is found, can be used by USER to define special characters, such as EOT (End Of Transmission), which will terminate a READ operation. The remainder of Figure 13 (13.7) shows the decoding of the commands to USRUN. The listings also include a test USER which exercises USRUN. This program sets up a 256-byte transmit buffer and transfers it to a similar input buffer by means of a local loop. When both the READ and WRITE operations are complete, the test USER checks to insure that the two buffers are identical. If the buffers differ, the MDS monitor is called; if the data is correct, the test is repeated.

CONCLUSION

The 8251 USART has been described both as a device and as a component in a system. Since not only modems but also many peripheral devices have a serial interface, the 8251 is an extremely useful component in a microcomputer system. A particular advantage of the device is that it is capable of operating in various modes without requiring hardware modifications to the system of which it is a part. As with any complex subsystem, however, the 8251 USART must be carefully applied so that it can be utilized to full advantage in the overall system. It is hoped that this application note will aid in the designer in the application of the 8251 USART. As a further aid to the application of the 8251, the appendix of this document includes a list of design hints based on past experience with the 8251.

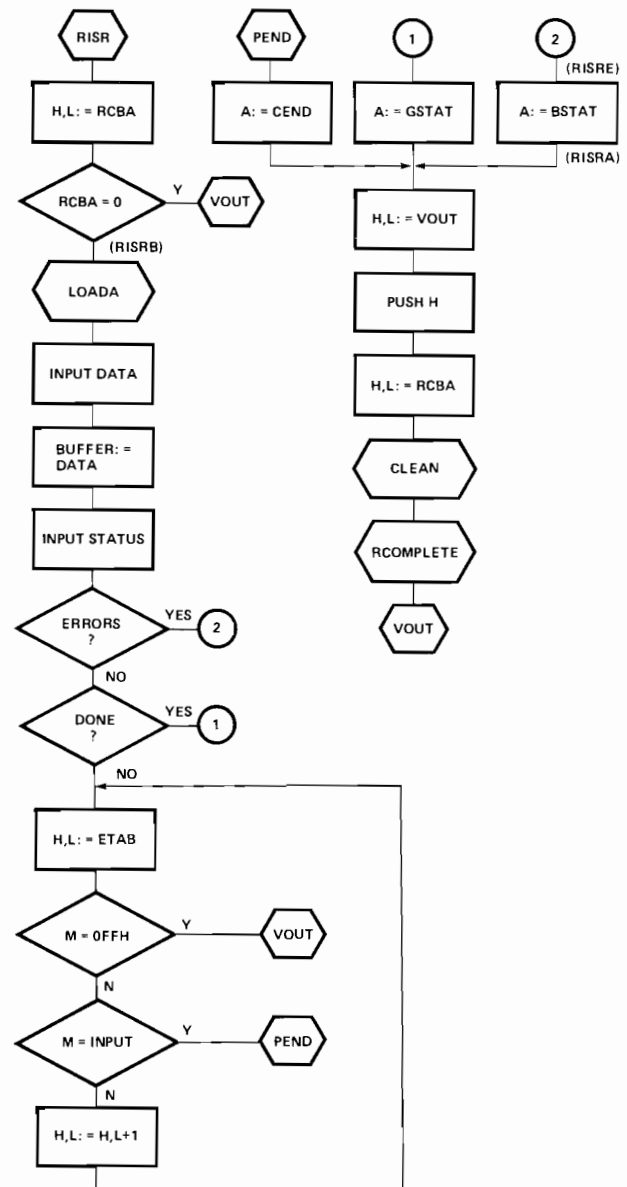


Figure 13.6. Receive Interrupt Service Routine

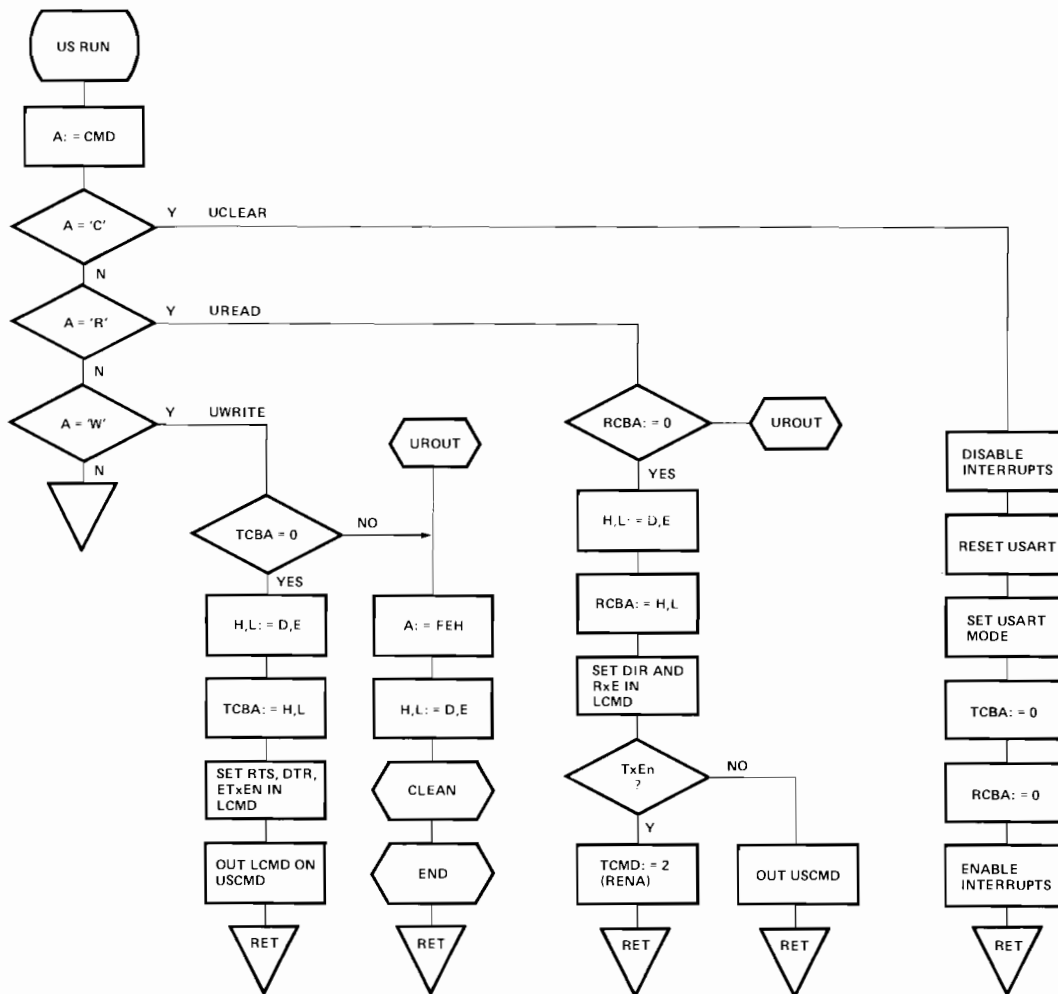


Figure 13.7. URUN Command Decode

Figure 14. Program Listing

```

;*****
;
;      SYSTEM ORIGIN STATEMENT
;
;*****

4000          ORG      4000H

;*****
;
;      DATA STORAGE FOR TEST USER
;
;*****

4000          BUFIN:   DS      100H      ;INPUT BUFFER
4100          BUFOUT:  DS      100H      ;OUTPUT BUFFER
4200 5200      RBLOCK:  DB      'R',00H  ;RECEIVE CONTROL BLOCK
4202 0040      RBAD:    DW      BUFIN
4204 FF00      RRCT:    DW      OFFH
4206 0000      RCCT:    DW      00H
4208 1742      RCRA:    DW      RCR
420A 5700      TBLOCK:  DB      'W',00H  ;TRANSMIT CONTROL BLOCK
420C 0041      TBAD:    DW      BUFOUT
420E FF00      TRCT:    DW      OFFH
4210 0000      TCCT:    DW      00H
4212 2742      TCRA:    DW      TCR
4214 4300      GBLOCK:  DB      'C',00H
4216 00        FLAG:    DB      00H

;*****
;
;      COMPLETION ROUTINES
;
;*****

4217 AF        RCR:     XRA      A          ;CLEAR A
4218 323B42     STA      RCBA      ;TURN OFF RECEIVE
421B 323C42     STA      RCBA+1
421E 3A1642     LDA      FLAG      ;GET FLAG
4221 E60F       ANI      OFH       ;CLEAR UPPER FOUR BITS
4223 321642     STA      FLAG      ;RESTORE FLAG
4226 C9        RET
4227 AF        TCR:     XRA      A          ;CLEAR A
4228 323942     STA      TCBA      ;TURN OFF TRANSMIT
422B 323A42     STA      TCBA+1
422E 3A1642     LDA      FLAG      ;GET FLAG
4231 E6F0       ANI      OF0H      ;CLEAR LOWER FOUR BITS
4233 321642     STA      FLAG      ;RESTORE FLAG
4236 C9        RET          ;THEN RETURN

```

```

;*****
;
;      SYSTEM EQUATES
;
;*****

00F5      USTAT   EQU      0F5H      ;USART STATUS ADDRESS
00F5      USCMD   EQU      0F5H      ;USART CMD ADDRESS
00F4      USDAI   EQU      0F4H      ;USART DATA INPUT ADDRESS
00F4      USDAO   EQU      0F4H      ;USART DATA OUTPUT ADDRESS
0000      GSTAT   EQU      00H       ;GOOD STATUS
00FF      BSTAT   EQU      0FFH      ;BAD STATUS
0001      CEND    EQU      01H

;*****
;
;      SYSTEM DATA TABLE
;
;*****

4237 00      LCMD:   DB      00H      ;CURRENT OPERATING COMMAND
4238 00      TCMD:   DB      00H      ;IF NON ZERO A COMMAND TO BE SENT
4239 0000     TCBA:   DW      00H      ;ADDRESS OF XMIT CBLOCK
423B 0000     RCBA:   DW      00H      ;ADDRESS OF RECEIVE CBLOCK
423D FF      MTAB:   DB      0FFH     ;END CHARACTER TABLE

```

```

;*****
;
;      LOAD ADDRESS ROUTINE
;      LOADA IS ENTERED WITH THE ADDRESS OF A CONTROL
;      BLOCK IN H,L. ON EXIT D,E CONTAINS THE ADDRESS
;      WHICH IS THE TARGET OF THE NEXT DATA TRANSFER (BAD+CCNT)
;      AND B HAS BEEN SET TO ZERO IF THE REQUESTED NUMBER OF
;      TRANSFERS HAS BEEN ACCOMPLISHED. CCNT IS INCREMENTED
;      AFTER THE TARGET ADDRESS HAS BEEN CALCULATED.
;*****

```

```

423E 23      LOADA:  INX      H          ;D,E GETS BUFFER ADDRESS
423F 23      INX      H
4240 5E      MOV      E,M
4241 23      INX      H
4242 56      MOV      D,M          ;DONE
4243 23      INX      H          ;B,C GETS COMPLETED COUNT (CCNT)
4244 23      INX      H
4245 23      INX      H
4246 4E      MOV      C,M
4247 23      INX      H
4248 46      MOV      B,M          ;DONE
4249 EB      XCHG                     ;D,E GETS BAD+CCNT
424A 09      DAD      B
424B EB      XCHG                     ;DONE
424C 03      INX      B          ;CCNT GETS INCREMENTED
424D 70      MOV      M,B
424E 2B      DCX      H
424F 71      MOV      M,C          ;DONE
4250 0B      DCX      B          ;DOES OLD CCNT=RCNT?
4251 2B      DCX      H
4252 7E      MOV      A,M
4253 90      SUB      B
4254 47      MOV      B,A
4255 C0      RNZ                     ;NO-RETURN WITH B NOT ZERO
4256 2B      DCX      H
4257 7E      MOV      A,M
4258 91      SUB      C
4259 47      MOV      B,A
425A C9      RET                     ;RETURN WITH B=0 IF RCNT=CCNT

```

```
;*****
;
;
;
;
;
;
;
;
;
;
;
;*****
```

```
CLEAN-UP ROUTINE
CLEAN IS ENTERED WITH THE ADDRESS OF A CONTROL
BLOCK IN H,L AND A NEW STATUS TO BE
ENTERED INTO IT IN A. ON EXIT THE ADDRESS OF THE
CONTROL BLOCK IS IN D,E; THE STATUS OF THE BLOCK
HAS BEEN UPDATED; AND THE ADDRESS OF THE COMPLETION
ROUTINE IS IN H,L.
```

```
425B 5D      CLEAN:  MOV     E,L      ;SAVE THE ADDRESS OF THE COMMAND BLOCK
425C 54              MOV     D,H
425D 23              INX     H        ;POINT AT STATUS
425E 77              MOV     M,A      ;SET STATUS EQUAL TO A
425F 010700         LXI     B,7      ;SET INDEX TO SEVEN
4262 09              DAD     B        ;POINT AT COMPLETION ADDRESS
4263 7E              MOV     A,M      ;GET LOWER ADDRESS
4264 23              INX     H        ;POINT AT UPPER ADDRESS
4265 66              MOV     H,M      ;H GETS HIGH ADDRESS BYTE
4266 6F              MOV     L,A      ;L GETS LOW ADDRESS BYTE
4267 C9              RET
```

```
;*****
;
;
;
;
;
;
;
;
;
;
;*****
```

```
INTERUPT VECTOR ROUTINE
VECTOR SAVES THE STATUS OF THE RUNNING PROGRAM
THEN READS THE STATUS OF THE USART TO DETERMINE
IF A RECEIVE OR TRANSMIT INTERUPT OCCURRED.
VECTOR THEN CALLS THE APPROPRIATE SERVICE ROUTINE.
IF NEITHER INTERUPTS OCCURRED THEN VECTOR RESTORES
THE STATUS OF THE RUNNING PROGRAM. THE SERVICE
ROUTINES USE THE EXIT CODE, LABELED VOUT, TO EFFECT
THEIR EXIT FROM INTERUPT MODE.
```

```
4268 F5      VECTOR:  PUSH    PSW      ;PUSH STATUS INTO THE STACK
4269 C5              PUSH    B
426A D5              PUSH    D
426B E5              PUSH    H
426C DBF5         IN      USTAT    ;GET USART ADDRESS
426E DBFA         IN      OFAH     ;MDS-GET MONITOR CARD INT. STATUS
4270 0F              RRC          ;ROTATE TWO PLACES
4271 0F              RRC          ;SO THAT CARRY=RXRDY
4272 DA8842        JC      RISR    ;IF RXRDY GO TO SERVICE ROUTINE
4275 07              RLC          ;IF NOT ROTATE BACK
4276 07              RLC          ;LEAVING TXRDY IN CARRY
4277 DAD442        JC      TISR    ;IF TXRDY THEN GO TO SERVICE ROUTINE
427A 3EFC         MVI     A,OFCH   ;MDS-CLEAR OTHER LEVEL THREE INTERUPTS
427C D3F3         OUT     OF3H     ;MDS
427E E1      VOUT:   POP     H      ;ELSE EXIT FROM INTERUPT MODE
427F D1              POP     D
4280 C1              POP     B
4281 3E20         MVI     A,20H    ;MDS-RESTORE CURRENT LEVEL
4283 D3FD         OUT     OFDH     ;MDS
4286 FB              EI          ;ENABLE INTERUPTS
4287 C9              RET
```

```

;*****
;
;      RECEIVE INTERRUPT SERVICE ROUTINE;
;      RISR PROCESSES A RECEIVE INTERRUPT
;      AT THE END OF RECEIVE THE USER SUPPLIED
;      COMPLETION ROUTINE IS CALLED AND THEN AN
;      EXIT IS TAKEN THROUGH VOUT OF THE
;      VECTOR
;*****

4288 2A3B42  RISR:  LHLD    RCBA
428B 3E82      MVI    A,82H    ;MDS-CLEAR RECEIVE INTERRUPT
428D D3F3      OUT    0F3H    ;MDS
428F 2C        INR     L
4290 2D        DCR     L
4291 C29942    JNZ     RISRB
4294 24        INR     H
4295 25        DCR     H
4296 CA7E42    JZ      VOUT
4299 CD3E42    RISRB:  CALL   LOADA    ;READY-SET UP ADDRESS
429C DBF4      IN      USDAI    ;GET INPUT DATA
429E 12        STAX    D        ;AND PUT IN THE BUFFER
429F 4F        MOV     C,A      ;SAVE INPUT DATA IN C
42A0 DBF5      IN      USTAT    ;GET STATUS AGAIN
42A2 E638      ANI     38H      ;MASK FOR ERROR FIELD
42A4 C2B942    JNZ     RISRE    ;NOT ZERO-TAKE ERROR EXIT
42A7 04        INR     B        ;B WAS 00 IF DONE
42A8 05        DCR     B
42A9 C2BE42    JNZ     EXCHAR    ;NOT DONE-EXIT
42AC 3E00      MVI     A,GSTAT   ;A GETS GOOD STATUS
42AE 217E42    RISRA:  LXI     H,VOUT ;GET RETURN ADDRESS
42B1 E5        PUSH    H        ;AND PUSH IT INTO THE STACK
42B2 2A3B42    LHLD    RCBA     ;POINT H,L AT THE CMD BLOCK
42B5 CD5B42    CALL    CLEAN    ;CALL CLEANUP ROUTINE
42B8 E9        PCHL          ;EFFECTIVELY CALLS COMPLETION ROUTINE
                          ;RETURN IS TO VOUT BECAUSE OF PUSH H
42B9 3EFF      RISRE:  MVI     A,BSTAT ;A GETS BAD STATUS
42BB C3AE42    JMP     RISRA    ;OTHERWISE EXIT IS NORMAL
42BE 213D42    EXCHAR: LXI     H,MTAB ;TEST CHARACTER AGAINST EXIT TABLE
42C1 7E        EXA:    MOV     A,M
42C2 FEFF      CPI     OFFH     ;END OF TABLE
42C4 CA7E42    JZ      VOUT
42C7 B9        CMP     C
42C8 CACF42    JZ      PEND     ;MATCH-TERMINATE READ
42CB 23        INX     H
42CC C3C142    JMP     EXA
42CF 3E01      PEND:  MVI     A,CEND
42D1 C3AE42    JMP     RISRA

```

```

;*****
;
; TRANSMIT INTERRUPT SERVICE ROUTINE
; TISR PROCESSES TRANSMITTER INTERRUPTS
; WHEN THE END OF A TRANSMISSION IS
; DETECTED THE USER SUPPLIED COMPLETION
; ROUTINE IS CALLED AND THEN AN EXIT IS
; TAKEN THROUGH VOUT OF VECTOR
;*****

42D4 3A3842 TISR: LDA TCMD ;GET POTENTIAL COMMAND
42D7 B7 ORA A ;DESIGNATE ON IT
42D8 C40443 CNZ TUTE ;DO UTILITY COMMAND
42DB 3E81 MVI A,081H ;MDS-CLEAR XMIT INTERRUPTS
42DD D3F3 OUT 0F3H ;MDS
42DF 2A3942 LHLD TCBA
42E2 2C INR L ;MAKE SURE HAVE VALID CONTROL BLOCK
42E3 2D DCR L
42E4 C2EC42 JNZ TISRA ;GOOD
42E7 24 INR H
42E8 25 DCR H
42E9 CA7E42 JZ VOUT ;NON VALID BLOCK (H,L=0)
42EC CD3E42 TISRA: CALL LOADA ;SET UP ADDRESS
42EF 1A LDAX D ;GET DATA FROM BUFFER
42F0 D3F4 OUT USDAO ;AND OUTPUT IT
42F2 04 INR B ;B WAS 00 IF DONE
42F3 05 DCR B
42F4 C27E42 JNZ VOUT ;NOT DONE-EXIT FROM SERVICE ROUTINE
42F7 217E42 LXI H,VOUT ;SET UP RETURN ADDRESS
42FA E5 PUSH H ;AND PUSH IT INTO THE STACK
42FB 3E00 MVI A,GSTAT ;A GETS GOOD STATUS
42FD 2A3942 LHLD TCBA ;POINT H,L AT COMMAND BLOCK
4300 CD5B42 CALL CLEAN ;CALL CLEANUP ROUTINE
4303 E9 PCHL ;CALL COMPLETION ROUTINE
;RETURN WILL BE TO VOUT
;RECEIVER OFF

4304 FE01 TUTE: CPI 01
4306 CA2443 JZ TUTE1
4309 FE02 CPI 02 ;RECEIVER ON
430B CA1443 JZ TUTE2
430E FE03 CPI 03 ;CLEAR ERRORS
4310 CA1C43 JZ TUTE3
4313 C9 RET
4314 3A3742 TUTE2: LDA LCMD
4317 F604 ORI 04
4319 323742 STA LCMD
431C 3A3742 TUTE3: LDA LCMD
431F F610 ORI 10H
4321 D3F5 TUTE4: OUT USCMD
4323 C9 RET
4324 3A3742 TUTE1: LDA LCMD
4327 E6FB ANI OFBH
4329 323742 STA LCMD
432C C32143 JMP TUTE4

```

```

;*****
;
;
;       USART COMMAND BLOCK INTERPRETER
;
;       USRUN IS CALLED BY USER WITH THE ADDRESS
;
;       OF THE COMMAND BLOCK IN H,L. USRUN EXAMINES
;
;       THE BLOCK AND INITIALIZES THE REQUESTED OPERATION
;
;*****

```

```

432F 1A      USRUN:  LDAX    D      ;GET THE CMD FROM THE BLOCK
4330 FE43    CPI      'C'      ;IS IT A CLEAR COMMAND?
4332 CA4043  JZ        UCLEAR   ;YES GO TO CLEAR ROUTINE
4335 FE52    CPI      'R'      ;IS IT A READ COMMAND?
4337 CA5D43  JZ        UREAD    ;YES-GO TO READ ROUTINE
433A FE57    CPI      'W'      ;IS IT A WRITE COMMAND?
433C CA9D43  JZ        UWRITE   ;GO TO WRITE ROUTINE
433F C9      RET          ;NOT A GOOD COMMAND-RETURN
4340 F3      UCLEAR:  DI        ;DISABLE INTERRUPTS
4341 AF      XRA        A        ;CLEAR A
4342 D3F5    OUT        USCMD    ;OUTPUT THREE TIMES TO ENSURE
4344 D3F5    OUT        USCMD    ;THAT THE USART IS IN A KNOWN STATE
4346 D3F5    OUT        USCMD
4348 3E40    MVI        A,40H    ;CODE TO RESET USART
434A D3F5    OUT        USCMD    ;OUTPUT ON CMD CHANNEL
434C 3E5E    MVI        A,05EH  ;CE IMPLIES ASYN MODE (X16)
;
;           8 DATA BITS
;
;           ODD PARITY
;
;           1 STOP BIT
434E D3F5    OUT        USCMD    ;OUTPUT ON CMD CHANNEL
4350 AF      XRA        A        ;CLEAR A, SET ZERO
4351 213942  LXI        H,TCBA   ;CLEAR TCBA AND RCBA
4354 77      MOV        M,A
4355 23      INX        H
4356 77      MOV        M,A
4357 23      INX        H
4358 77      MOV        M,A
4359 23      INX        H
435A 77      MOV        M,A
435B FB      EI          ;ENABLE INTERRUPTS
435C C9      RET          ;AND RETURN TO USER
;
;
435D 213B42  UREAD:  LXI        H,RCBA ;CHECK READ IDLE
4360 7E      MOV        A,M
4361 B7      ORA        A
4362 C26B43  JNZ        UROUT
4365 23      INX        H
4366 7E      MOV        A,M
4367 B7      ORA        A
4368 CA7743  JZ        URDA      ;READ IS IDLE-PROCEED
436B 3EFE    UROUT:  MVI        A,0FEH ;ALREADY RUNNING-ERROR STATUS
436D 217643  LXI        H,URDB   ;SET UP RETURN ADDRESS
4370 E5      PUSH       H        ;PUSH IT INTO STACK
4371 EB      XCHG        ;H GETS COMMAND BLOCK ADDRESS
4372 CD5B42  CALL       CLEAN    ;CALL CLEANUP ROUTINE
4375 E9      PCHL        ;EFFECTIVELY CALLS END ROUTINE
4376 C9      URDB:  RET          ;RETURN TO USER
;
4377 EB      URDA:  XCHG        ;H GETS COMMAND BLOCK ADDRESS
4378 223B42  SHLD       RCBA     ;RCBA GETS COMMAND BLOCK ADDRESS
437B 3A3742  LDA        LCMD     ;GET LAST COMMAND
437E F616    ORI        16H     ;SET RXE AND DTR AND RESET ERRORS
4380 323742  STA        LCMD     ;AND RETURN TO MEMORY
4383 0F      RRC          ;SET CARRY EQUAL TO TXE

```

```

4384 D28C43      JNC      URDC
4387 3E02        MVI      A,2
4389 323842      STA      TCMD
438C 07          URDC:   RLC
438D D3F5        OUT      USCMD      ;OUTPUT CMD
438F DBF4        IN       USDAI      ;CLEAR USART OF LEFT OVER CHARACTERS
4391 DBF4        IN       USDAI
4393 3E82        MVI      A,82H      ;MDS-CLEAR RECEIVE INTERRUPT
4395 D3F3        OUT      OF3H      ;MDS
4397 3EF6        MVI      A,0F6H     ;MDS-ENABLE LEVEL THREE
4399 D3FC        OUT      OFCH      ;MDS
439B FB          EI           ;ENABLE INTERRUPTS
439C C9          RET          ;RETURN TO USER

```

```

439D 213942      UWRITE: LXI      H,TCBA ;CHECK WRITE IDLE
43A0 7E          MOV      A,M
43A1 B7          ORA      A
43A2 C26B43      JNZ      UROUT      ;BUSY-EXIT
43A5 23          INX      H
43A6 7E          MOV      A,M
43A7 C26B43      JNZ      UROUT      ;BUSY-EXIT
43AA EB          XCHG          ;OK-H GETS COMMAND BLOCK ADDRESS
43AB 223942      SHLD     TCBA      ;TCBA GETS COMMAND BLOCK ADDRESS
43AE 3A3742      LDA      LCMD      ;GET LAST COMMAND
43B1 F623        ORI      023H     ;SET RTS,DTR, AND TXEN
43B3 323742      STA      LCMD
43B6 D3F5        OUT      USCMD
43B8 3EF6        MVI      A,0F6H     ;MDS-ENABLE LEVEL THREE INTERRUPTS
43BA D3FC        OUT      OFCH      ;MDS
43BC FB          EI           ;ENABLE SYSTEM INTERRUPTS
43BD C9          RET          ;AND RETURN

```



```

;*****
;
;      USER IS A TEST PROGRAM WHICH EXERCISES USRUN
;
;*****

43BE 3EC3      USER:  MVI      A,0C3H   ;MDS-SET INTERRUPT VECTOR
43C0 321800    STA      018H
43C3 216842    LXI      H,VECTOR
43C6 221900    SHLD     019H
43C9 3E43      MVI      A,'C'      ;SET GENERAL BLOCK TO A 'C'
43CB 111442    LXI      D,GBLOCK
43CE 12        STAX     D
43CF CD2F43    CALL     USRUN
43D2 210040    LXI      H,BUFIN ;CLEAR INPUT BUFFER
43D5 AF        XRA      A
43D6 77        MOV      M,A
43D7 2C        INR      L
43D8 C2D643    JNZ      $-2
43DB 210041    LXI      H,BUFOUT ;INITIALIZE OUTPUT BUFFER
43DE 75        MOV      M,L
43DF 2C        INR      L
43E0 C2DE43    JNZ      $-2
43E3 65        MOV      H,L      ;REINTIALIZE CONTROL BLOCKS
43E4 2E52      MVI      L,'R'
43E6 220042    SHLD     RBLOCK
43E9 2E57      MVI      L,'W'
43EB 220A42    SHLD     TBLOCK
43EE 6C        MOV      L,H
43EF 220642    SHLD     RCCT
43F2 221042    SHLD     TCCT
43F5 110042    LXI      D,RBLOCK ;START READ
43F8 CD2F43    CALL     USRUN
43FB 110A42    LXI      D,TBLOCK ;START WRITE
43FE CD2F43    CALL     USRUN
44C1 3EFF      MVI      A,OFFH   ;LOOP WAITING COMPLETION
44C3 321642    STA      FLAG     ;FLAG WILL BE SET BY COMPLETION ROUTINES
44C6 3A1642    LDA      FLAG
44C9 B7        ORA      A
44CA C20644    JNZ      $-4
44CD 210040    LXI      H,BUFIN ;TEST INPUT BUFFER=OUTPUT BUFFER
4410 7E        COMLP:  MOV      A,M
4411 24        INR      H
4412 BE        CMP      M
4413 C21E44    JNZ      COMER
4416 25        DCR      H
4417 2C        INR      L
4418 C21044    JNZ      COMLP
441B C3BE43    JMP      USER     ;GOOD COMPARE-REPEAT TEST
441E C7        COMER:  RST      0      ;ERROR-RETURN TO MONITOR

00C0          END

```

BSTAT	00FF	BUFIN	4000	BUFOU	4100	CEND	0001
CLEAN	425B	COMER	441E	COMLP	4410	EXA	42C1
EXCHA	42BE	FLAG	4216	GBLOC	4214	GSTAT	0000
LCMD	4237	LOADA	423E	MTAB	423D	PEND	42CF
RBAD	4202	RBLOC	4200	RCBA	423B	RCCT	4206
RCR	4217	RCRA	4208	RISR	4288	RISRA	42AE
RISRB	4299	RISRE	42B9	RRCT	4204	TBAD	420C
TBLOC	420A	TCBA	4239	TCCT	4210	TCMD	4238
TCR	4227	TCRA	4212	TISR	42D4	TISRA	42EC
TRCT	420E	TUTE	4304	TUTE1	4324	TUTE2	4314
TUTE3	431C	TUTE4	4321	UCLEA	4340	URDA	4377
URDB	4376	URDC	438C	UREAD	435D	UROUT	436B
USCMD	00F5	USDAI	00F4	USDAO	00F4	USER	43BE
USRUN	432F	USTAT	00F5	UWRIT	439D	VECTO	4268
VOUT	427E						

APPENDIX A

8251 DESIGN HINTS

1. Output of a command to the USART destroys the integrity of a transmission in progress if timed incorrectly.

Sending a command into the USART will overwrite any character which is stored in the buffer waiting for transfer to the parallel-to-serial converter in the device. This can be avoided by waiting for TxRDY to be asserted before sending a command if transmission is taking place. Due to the internal structure of the USART, it is also possible to disturb the transmission if a command is sent while a SYN character is being generated by the device. (The USART generates a SYN if the software fails to respond to TxRDY.) If this occurrence is possible in a system, commands should be transferred only when a positive-going edge is detected on the TxRDY line.

2. RxE only acts as a mask to RxRDY; it does not control the operation of the receiver.

When the receiver is enabled, it is possible for it to already contain one or two characters. These characters should be read and discarded when the RxE bit is first set. Because of these extraneous characters the proper sequence for gaining synchronization is as follows:

1. Disable interrupts
2. Issue a command to enter hunt mode, clear errors, and enable the receiver (EH,ER,RxE=1)
3. Read USART data (it is not necessary to check status)
4. Enable interrupts

The first RxRDY that occurs after the above sequence will indicate that the SYN character or

characters have been detected and the next character has been assembled and is ready to be read.

3. Loss of CTS or dropping TxEnable will immediately clamp the serial output line.

TxEnable and RTS should remain asserted until the transmission is complete. Note that this implies that not only has the USART completed the transfer of all bits of the last character, but also that they have cleared the modem. A delay of 1 msec following a proper occurrence of TxEmpty is usually sufficient (see item 4). An additional problem can occur in the synchronous mode because the loss of TxEnable clamps the data in at a SPACE instead of the normal MARK. This problem, which does not occur in the asynchronous mode, can be corrected by an external gate combining RTS and the serial output data.

4. Extraneous transitions can occur on TxEmpty while data (including USART generated SYNs) is transferred to the parallel-to-serial converter. This situation can be avoided by ensuring that TxEmpty occurs during several consecutive status reads before assuming that the transmitter is truly in the empty state.

5. A BREAK (i.e., long space) detected by the receiver results in a string of characters which have framing errors.

If reception is to be continued after a BREAK, care must be taken to ensure that valid data is being received; special care must be taken with the last character perceived during a BREAK, since its value, including any framing error associated with it, is indeterminate.

U.S. AND CANADIAN SALES OFFICES

ALABAMA

Barnhill and Associates
7844 Horseshoe Trail
Huntsville 35802
Tel: (205) 883-9394

ARIZONA

Sales Engineering, Inc.
7155 E. Thomas Road, No. 6
Scottsdale 85252
Tel: (602) 945-5781
TWX: 910-950-1288

CALIFORNIA

Intel Corp.*
990 E. Arques Ave.
Suite 112
Sunnyvale 94086
Tel: (408) 738-3870
TWX: 910-339-9279

Mac-I

P.O. Box 1420
Cupertino 95014
Tel: (408) 257-9880
Earle Associates, Inc.
4433 Convoy Street
Suite A
San Diego 92111
Tel: (714) 278-5441
TWX: 910-335-1585
Intel Corp.*
1651 East 4th Street
Suite 278
Santa Ana 92701
Tel: (714) 835-9642
TWX: 910-595-1114

COLORADO

Intel Corp.*
12075 East 45th Avenue
Suite 310
Denver 80239
Tel: (303) 373-4920
TWX: 910-932-0322

FLORIDA

Intel Corp.*
1090 NE 27th Terrace
Pompano Beach 33062
Tel: (305) 781-7450
TWX: 510-956-9407

FLORIDA (cont.)

Intel Corp.*
5151 Adanson Street, Suite 200-3
Orlando 32804
Tel: (305) 628-2393
TWX: 810-853-9219

ILLINOIS

Intel Corp.*
900 Jorie Boulevard
Suite 138
Oakbrook 60521
Tel: (312) 325-9510
TWX: 910-651-5881

IOWA

Technical Representatives, Inc.
1703 Hillside Drive
Cedar Rapids
Tel: (319) 396-5662

KANSAS

Technical Representatives, Inc.
801 Clairborne
Olathe 66061
Tel: (913) 782-1177
TWX: 910-749-6412

MARYLAND

Barnhill and Associates
57 West Timonium Road
Timonium 21093
Tel: (301) 252-7742
Intel Corp.*
57 West Timonium Road
Suite 307
Timonium 21093
Tel: (301) 252-7742
TWX: 710-232-1807

MASSACHUSETTS

Dalcom
55 Moody Street
Waltham 02154
Tel: (617) 891-4600
TELEX: 92-3462

Intel Corp.*

187 Billerica Road, Suite 14A
Chelmsford 01824
Tel: (617) 861-1136
TWX: 710-343-6333

MICHIGAN

Intel Corp.*
725 South Adams Road
Suite 288
Birmingham 48011
Tel: (313) 642-7018
TWX: 910-420-1212
TELEX: 231143

MINNESOTA

Intel Corp.*
675 Southgate Office Plaza
5001 West 80th Street
Bloomington 55437
Tel: (612) 835-6722
TWX: 910-576-2867

MISSOURI

Technical Representatives, Inc.
Trade Center Bldg.
300 Brookes Drive, Suite 108
Hazelwood 63042
Tel: (314) 731-5200
TWX: 910-762-0618

NEW JERSEY

Intel Corp.*
2 Kilmer Road
Edison 08817
Tel: (201) 985-9100
TWX: 710-480-6238

NEW YORK

Intel Corp.*
6901 Jericho Turnpike
Syosset 11791
Tel: (516) 364-9860
TWX: 510-221-2198

Intel Corp.

474 Thurston Road
Rochester, N.Y. 14619
Tel: (716) 328-7340
TWX: 510-253-3841

T-Squared

3522 James Street
Syracuse 13206
Tel: (315) 463-8592
TWX: 710 541-0554

NEW YORK (cont.)

T-Squared
640 Craig Road
P.O. Box W
Pittsford 14534
Tel: (716) 381-2551
TELEX: 97-8289
Intel Corp.*
55 Market Street
Poughkeepsie, New York 12601
Tel: (914) 473-2303
TWX: 510-248-0060

NORTH CAROLINA

Barnhill and Associates
913 Plateau Lane
Raleigh 27609
Tel: (919) 876-5617

OHIO

Intel Corp.*
8312 North Main Street
Dayton 45415
Tel: (513) 890-5350
TELEX: 288-004

Intel Corp.*

27801 Euclid Ave.
Suite 450
Euclid 44132
Tel: (216) 289-0101

PENNSYLVANIA

Vantage Sales Company
21 Bala Avenue
Bala Cynwyd 19004
Tel: (215) 667-0990
TWX: 510-662-5846

Intel Corp.*

1777 Walton Rd.
Suite 328A
Blue Bell 19422
Tel: (215) 542-9444
TWX: 510-661-0709

TENNESSEE

Barnhill and Associates
206 Chickasaw Drive
Johnson City 37601
Tel: (615) 928-0184

TEXAS

Evans & McDowell Associates
13777 N. Central Expressway
Suite 405
Dallas 75231
Tel: (214) 238-7157
TWX: 910-867-4763

Evans & McDowell Associates
6610 Harwin Avenue, Suite 125
Houston 77036
Tel: (713) 783-2900

Intel Corp.*

6350 L.B.J. Freeway
Suite 178
Dallas 75240
Tel: (214) 661-8829
TWX: 910-860-5487

VIRGINIA

Barnhill and Associates
P.O. Box 1104
Lynchburg 24505
Tel: (804) 846-4624

WASHINGTON

E.S./Chase Co.
P.O. Box 80903
Seattle 98108
Tel: (206) 762-4824
TWX: 910-444-2298

CANADA

Multitek, Inc.
4 Barren Street
Ottawa, Ontario K2J 1G2
Tel: (613) 825-4695
TELEX: 053-4585

EUROPEAN MARKETING OFFICES

BELGIUM

Intel International*
Rue du Moulin à Papier
51-Boite 1
B-1160 Brussels
Tel: (02) 660 30 10
TELEX: 24814

FRANCE

Intel Corporation, S.A.R.L.*
74, Rue D'Arcueil
Silic 223
94528 Rungis Cedex
Tel: (01) 687 22 21
TELEX: 270475

SCANDINAVIA

Intel Scandinavia A/S*
Lyngbyvej 32 2nd Floor
DK-2100 Copenhagen East
Denmark
Tel: (01) 18 20 00
TELEX: 19567

Intel Sweden AB*

Box 86
S-16212 Vällingby 1
Sweden
Tel: (08) 37 53 70
TELEX: 13164 (ABCENT)

ENGLAND

Intel Corporation (U.K.) Ltd.*
Broadfield House
4 Between Towns Road
Cowley, Oxford OX4 3NB
Tel: (0865) 77 14 31
TELEX: 837203

Intel Corporation (U.K.) Ltd.

46-50 Beam Street
Nantwich, Cheshire CW5 5LJ
Tel: (0270) 62 65 60
TELEX: 36620

GERMANY

Intel Semiconductor GmbH*
Wolfratshausenstrasse 169
D8 Munich 71
Tel: (089) 79 89 23
TELEX: 5-212870

Intel Semiconductor GmbH

D-6272 Niedernhausen
Wiesenweg 26
Tel: (06127) 2314
TELEX: 04186183

Intel Semiconductor GmbH

D-7000 Stuttgart 80
Ernstthalstrasse 17
Tel: (0711) 7351506
TELEX: 7255346

ORIENT MARKETING OFFICES

JAPAN

Intel Japan Corporation*
Flower Hill-Shinmachi East Bldg.
1-23-9 Shinmachi, Setagaya-ku
Tokyo 154
Tel: (03) 426-9261
TELEX: 781-28426

HONG KONG

Q1 (Far East) Ltd.
Tak Yan Commercial Bldg. 6th floor
30-32 D'Aguilar Street, Central
Hong Kong
Tel: 5-260311
TELEX: 83138 JADE HX

TAIWAN

Taiwan Automation Co.*
8th Floor, 140, Section 1
Chung Hsiao E. Road
Taipei
Tel: 393-1115
TELEX: 11942 TAI AUTO

TAIWAN (cont.)

Asionics-Taiwan, Inc.
205 Pa-Teh Road, Section 4
Taipei
Tel: 75 55 82
TELEX: 22158 Asionics

INTERNATIONAL DISTRIBUTORS

AUSTRALIA

A. J. Ferguson (Adelaide) PTY, Ltd.
44 Prospect Rd.
Prospect 5082
South Australia
Tel: 2-9-1244
TELEX: 82635

AUSTRIA

Bachner Elektronische Geräte GmbH
Meidinger Hauptstrasse 78
A 112 Vienna
Tel: (0222) 83 63 96
TELEX: (01) 1532

BELGIUM

Intel Belgium S.A.
Avenue Val Duchesse, 3
B-1160 Brussels
Tel: (02) 660 00 12
TELEX: 25441

DENMARK

Scandinavian Semiconductor
Supply A/S
Narresgade 18
DK-2200 Copenhagen N
Tel: (01) 93 50 90
TELEX: 19037

FINLAND

Oy Fintronic AB
Karjalankatu 2C,
SF 00520
Helsinki 52
Tel: (90) 664 451
TELEX: 12426

FRANCE

Tekelec Airtronic
Cite des Bruyeres
Rue Carle Vernet
92310 Sevres
Tel: (1) 027 75 35
TELEX: 250997

GERMANY

Alfred Neye Electronik GmbH
Schillerstrasse 14
D-2085 Quickborn-Hamburg
Tel: (04106) 6121
TELEX: 02-13590

Electronic 2000 Vertriebs GmbH

Neumarketer Strasse 75
D-8000 Muenchen 80
Tel: (089) 434061
TELEX: 484426
Jermyn GmbH
Postfach 1146
D-6277 Kamborg
Tel: (06434) 6005
TELEX: 484426

HONG KONG

ASTEC International
Keystone House, 2nd Floor
Hankow Road, Kowloon
Tel: 3-687760
TELEX: 74899 ASCOM

ISRAEL

Telsys Ltd.
54, Jabotinsky Road
IL-Ramat - Gan 52 464
Tel: (3) 73 98 65
TELEX: 32392

Eastronics Ltd.

11 Rozanis Street
P.O. Box 39300
Tel-Aviv
Tel: 475151
TELEX: 33638

ITALY

Eledra 3S S.P.A.
Viale Elvezia, 18
20154 Milan,
Tel: (02) 3493041
TELEX: 39332
Eledra 3S S.P.A.
Via Giuseppe Valmarana, 63
00139 Rome, Italy
Tel: (06) 81 27 290 - 81 27 324

JAPAN

Pan Electron
No. 1 Higashikata-Machi
Midori-Ku, Yokohama 226
Tel: (045) 471-8811
TELEX: 781-4773

NETHERLANDS

Inelco Nederland
AFD Elektronik
Joan Muyskenweg 22
NL-1006 Amsterdam
Tel: (020) 934824
TELEX: 14622

NORWAY

Nordisk Elektronik (Norge) A/S
Mustads Vei 1
N-050 2
Tel: (02) 55 38 93
TELEX: 16963

SOUTH AFRICA

Electronic Building Elements
P.O. Box 4609
Pretoria
Tel: 78 92 21
TELEX: 30181

SPAIN

Interface
Ronda General Mitre 27
E-Barcelona 17
Tel: (93) 203-5330
TELEX: 52838

SWEDEN

Nordisk Elektronik AB
Fack
S-10380 Stockholm 7
Tel: (08) 248340
TELEX: 10547

SWITZERLAND

Industrie AG
Gemmenstrasse 2
Postfach 80 - 21190
CH-8021 Zurich
Tel: (01) 60 22 30
TELEX: 56788

UNITED KINGDOM

Rapid Recall, Ltd.
11-15 Betterton Street
Drury Lane
London WC2H 9BS
Tel: (01) 379-6741
TELEX: 28752

G.E.C. Semiconductors Ltd.

East Lane
Wembley HA9 7PP
Middlesex
Tel: (01) 904-9303
TELEX: 923429
Jermyn Industries
Bstry. Sevenoaks Road
Sevenoaks, Kent
Tel: (0732) 51174
TELEX: 95143

*Field Application Location

U.S. AND CANADIAN DISTRIBUTORS

ALABAMA

†Hamilton/Avnet Electronics
805 Oser Drive NW
Huntsville 35805
Tel: (205) 533-1170

ARIZONA

Cramer/Arizona
2643 East University Drive
Phoenix 85034
Tel: (602) 263-1112
Hamilton/Avnet Electronics
2615 South 21st Street
Phoenix 85034
Tel: (602) 275-7851
Liberty/Arizona
3130 N. 27th Avenue
Phoenix 85107
Tel: (602) 257-1272
TELEX: 910-951-4282

CALIFORNIA

†Hamilton/Avnet Electronics
575 E. Middlefield Road
Mountain View 94040
Tel: (415) 961-7000
†Hamilton/Avnet Electronics
8917 Complex Drive
San Diego 92123
Tel: (714) 279-2421
†Hamilton Electro Sales
10912 W. Washington Boulevard
Culver City 90230
Tel: (213) 558-2121
†Cramer/San Francisco
720 Palomar Avenue
Sunnyvale 94086
Tel: (408) 739-3011
†Cramer/Los Angeles
1720 Daimler Street
Irvine 92705
Tel: (714) 979-3000
Cramer/San Diego
8975 Complex Drive
San Diego 92123
Tel: (714) 565-1881
†Liberty Electronics
124 Maryland Street
El Segundo 90245
Tel: (213) 322-8100
Tel: (714) 638-7601
TWX: 910-348-7140
Liberty/San Diego
8248 Mercury Court
San Diego 92111
Tel: (714) 565-9171
TELEX: 910-335-1590
Elmar Electronics
2288 Charleston Road
Mountain View 94040
Tel: (415) 961-3611
TELEX: 910-379-6437

COLORADO

Cramer/Denver
5465 E. Evans Pl. at Hudson
Denver 80222
Tel: (303) 758-2100
Elmar/Denver
6777 E. 50th Avenue
Commerce City 80022
Tel: (303) 287-9611
TWX: 910-936-0770
†Hamilton/Avnet Electronics
5921 No. Broadway
Denver 80216
Tel: (303) 534-1212

CONNECTICUT

Cramer/Connecticut
35 Dodge Avenue
North Haven 06473
Tel: (203) 239-5641
Components Plus
361 W. State
Westport 08880
Tel: (203) 226-4731
Hamilton/Avnet Electronics
643 Danbury Road
Georgetown 06829
Tel: (203) 762-0361

FLORIDA

Cramer/E.W. Hollywood
4035 No. 29th Avenue
Hollywood 33020
Tel: (305) 923-8181
†Hamilton/Avnet Electronics
4020 No. 29th Ave.
Hollywood 33021
Tel: (305) 925-5401
†Cramer/EW Orlando
345 No. Graham Ave.
Orlando 32814
Tel: (305) 894-1511

GEORGIA

Cramer/EW Atlanta
3923 Oakcliff Industrial Center
Atlanta 30340
Tel: (404) 448-9050
Hamilton/Avnet Electronics
6700 I 85, Access Road, Suite 2B
Norcross 30071
Tel: (404) 448-0800

ILLINOIS

†Cramer/Chicago
1911 So. Busse Rd.
Mt. Prospect 60056
Tel: (312) 593-8230
†Hamilton/Avnet Electronics
3901 No. 25th Ave.
Schiller Park 60176
Tel: (312) 678-6310

INDIANA

Pioneer/Indiana
6408 Castleplace Drive
Indianapolis 46250
Tel: (317) 547-7777
Sheridan Sales Co.
8790 Purdue Road
Indianapolis 46268
Tel: (317) 297-3146

KANSAS

Hamilton/Avnet Electronics
37 Lenexa Industrial Center
9900 Plumm Road
Lenexa 66215
Tel: (913) 888-8900

MARYLAND

Cramer/EW Baltimore
7235 Standard Drive
Hanover 21076
Tel: (301) 796-5790
†Cramer/EW Washington
16021 Industrial Drive
Gaithersburg 20760
Tel: (301) 948-0110
†Hamilton/Avnet Electronics
7235 Standard Drive
Hanover 21076
Tel: (301) 796-5000

MASSACHUSETTS

†Cramer Electronics Inc.
85 Wells Avenue
Newton 02159
Tel: (617) 969-7700
†Hamilton/Avnet Electronics
100 E. Commerce Way
Woburn 01801
Tel: (617) 273-2120

MICHIGAN

Sheridan Sales Co.
24543 Indoplex Drive
Farmington Hills 48024
Tel: (313) 477-3800
†Pioneer/Michigan
13485 Stamford
Livonia 48150
Tel: (313) 729-8500
†Hamilton/Avnet Electronics
12870 Farmington Road
Livonia 48150
Tel: (313) 522-4700
TWX: 810-242-8775

MINNESOTA

†Industrial Components
5280 West 74th Street
Minneapolis 55435
Tel: (612) 831-2666
Cramer/Bonn
7275 Bush Lake Road
Edina 55435
Tel: (612) 835-7811
†Hamilton/Avnet Electronics
7683 Washington Avenue So.
Edina 55435
Tel: (612) 941-3801

MISSOURI

†Hamilton/Avnet Electronics
364 Brookes Lane
Hazelwood 63042
Tel: (314) 731-1144

NEW JERSEY

Cramer/Pennsylvania, Inc.
12 Springdale Road
Cherry Hill Industrial Center
Cherry Hill 08003
Tel: (609) 424-5993
TWX: 710-896-0908
Components Plus
310 Railroad Avenue
Hackensack 07601
Tel: (201) 487-0565

NEW JERSEY (cont.)

†Hamilton/Avnet Electronics
218 Little Falls Road
Cedar Grove 07009
Tel: (201) 239-0800
TWX: 710-994-5787
Cramer/New Jersey
No. 1 Barrett Avenue
Moonachie 07074
Tel: (201) 935-5600
†Hamilton/Avnet Electronics
113 Gaither Drive
East Gate Industrial Park
Mt. Laurel 08057
Tel: (609) 234-2133
TWX: 710-897-1405

NEW MEXICO

Hamilton/Avnet Electronics
2450 Baylor Drive, S.E.
Albuquerque 87119
Tel: (505) 765-1500
Cramer/New Mexico
137 Vermont, N.E.
Albuquerque 87108
Tel: (505) 265-5767

NEW YORK

Cramer/Rochester
3000 Winton Road South
Rochester 14623
Tel: (716) 275-0300
Components Plus
40 Oser Avenue
Hauppauge 11787
Tel: (516) 231-9200
†Hamilton/Avnet Electronics
167 Clay Road
Rochester 14623
Tel: (716) 442-7820
†Cramer/Syracuse
6716 Joy Road
East Syracuse 13057
Tel: (315) 437-6671
†Hamilton/Avnet Electronics
6500 Joy Road
E. Syracuse 13057
Tel: (315) 437-2642
†Cramer/Long Island
29 Oser Avenue
Hauppauge, L.I. 11787
Tel: (516) 231-5600
TWX: 510-227-9863
†Hamilton/Avnet Electronics
70 State Street
Westbury, L.I. 11590
Tel: (516) 333-5800
TWX: 510-222-8237

NORTH CAROLINA

Cramer Electronics
938 Burke Street
Winston-Salem 27102
Tel: (919) 725-8711

OHIO

†Hamilton/Avnet Electronics
118 Westpark Road
Dayton 45459
Tel: (513) 433-0610
TWX: 810-450-2531
†Pioneer/Dayton
1900 Troy Street
Dayton 45404
Tel: (513) 236-9900
†Sheridan Sales Co.
10 Knollcrest Drive
Cincinnati 45222
Tel: (513) 761-5432
TWX: 810-461-2670
†Pioneer/Cleveland
4800 E. 131st Street
Cleveland 44105
Tel: (216) 587-3600
†Hamilton/Avnet Electronics
761 Beta Drive
Cleveland 44143
Tel: (216) 461-1400
Sheridan Sales Co.
23224 Commerce Park Road
Beachwood 44122
Tel: (216) 831-0130
Sheridan Sales Co.
Shiloh Building, Suite 250
5045 North Main Street
Dayton 45405
Tel: (513) 277-8911

OKLAHOMA

Components Specialties, Inc.
7920 E. 40th Street
Tulsa 74145
Tel: (918) 664-2820

OREGON

Almac/Strom Electronics
4475 S.W. Scholls Ferry Rd.
Portland 97225
Tel: (503) 292-3534

PENNSYLVANIA

Sheridan Sales Co.
1717 Penn Avenue, Suite 5009
Pittsburgh 15221
Tel: (412) 244-1640
Pioneer/Pittsburgh
560 Alpha Drive
Pittsburgh 15238
Tel: (412) 782-2300

TEXAS

Cramer Electronics
13740 Midway Road
Dallas 75240
Tel: (214) 661-9300
†Hamilton/Avnet Electronics
4445 Sigma Road
Dallas 75240
Tel: (214) 661-8661
†Hamilton/Avnet Electronics
1216 W. Clay
Houston 77019
Tel: (713) 526-4661
Component Specialties, Inc.
10907 Shady Trail, Suite 101
Dallas 75220
Tel: (214) 357-4576
†Component Specialties, Inc.
7313 Ashcroft Street
Houston 77036
Tel: (713) 771-7237

UTAH

Cramer/Utah
391 W. 2500 South
Salt Lake City 84115
Tel: (801) 487-4131
Hamilton/Avnet Electronics
647 W. Billinis Road
Salt Lake City 84119
Tel: (801) 262-8451

WASHINGTON

†Hamilton/Avnet Electronics
13407 Northrup Way
Bellevue 98005
Tel: (206) 746-8750
†Almac/Strom Electronics
5811 Sixth Ave. South
Seattle 98108
Tel: (206) 763-2300
Cramer/Seattle
1059 Andover Park East
Tukwila 98188
Tel: (206) 575-0907

CANADA

ALBERTA

L. A. Varah Ltd.
4742 14th Street N.E.
Calgary T2E 6L7
Tel: (403) 276-8818
Telex: 13 825 89 77

BRITISH COLUMBIA

†L.A. Varah Ltd.
2077 Alberta Street
Vancouver V5Y 1C4
Tel: (604) 873-3211
TWX: 610-929-1068
Telex: 04 53167

ONTARIO

Cramer/Canada
920 Alness Avenue, Unit No. 9
Downsview
Toronto 392 M3J 2H7
Tel: (416) 661-9222
TWX: 610-492-6210
Hamilton/Avnet Electronics
6291-16 Dorman Road
Mississauga L4V 1H2
Tel: (416) 677-7432
TWX: 610-492-8867
Hamilton/Avnet Electronics
1735 Courtwood Cresc.
Ottawa K2C 2B4
Tel: (613) 226-1700
TWX: 610-562-1906

QUEBEC

†Hamilton/Avnet Electronics
2670 Paulus
St. Laurent H4S 1G2
Tel: (514) 331-6443
TWX: 610-421-3731

MANITOBA

L.A. Varah Ltd.
153 Corbett Drive
Winnipeg R2Y 1V4
Tel: (204) 889-9607

†MDS Centers



INTEL CORPORATION, 3065 Bowers Avenue, Santa Clara, CA 95051